

Table of Contents

1. Introduction.....	3
1.1 Preface.....	3
1.2 Packing List	4
1.3 Caution.....	4
1.4 Connection	6
1.5 First Time Usage	12
2. About the Player	13
2.1 Remote Control.....	13
2.2 Front Panel	17
2.3 Rear Panel	18
3. Getting Started.....	19
3.1 Selecting DVB-T TV (only for S800).....	19
3.2 Selecting Analog TV (only for S800)	19
3.3 Selecting A/V In – Signal from the A/V IN jack	19
3.4 Selecting Playback – Playback and Edit Recorded Titles.....	19
3.5 Selecting Browser – Playback Multimedia Files	20
3.6 Selecting Media Library	20
3.7 Selecting Internet Radio.....	20
4. Watching Analog & DVB-T TV programs (only for S800)	21
4.1 Watching Analog TV programs (only for S800).....	21
4.2 Watching DVB-T TV programs (only for S800)	21
5. The Title List Menu for Recorded Videos	25
5.1 Title List Menu.....	25
5.2 Playing Back Titles	26
5.3 Deleting Titles	26
5.4 Renaming Titles	26
5.5 Sorting Files	27
5.6 Title Edit Menu	28
5.7 Tools.....	30
5.8 Saving Your Recorded Titles.....	30
6. Timer Record Menu	31
6.1 Create a New Schedule	31
6.2 Editing Schedule	31
6.3 Deleting Schedules.....	32
6.4 Viewing Schedule Status.....	32
6.5 Viewing Recording History	33
7. Setup Menu	34
7.1 Changing DVB-T TV settings (only for S800).....	34
7.2 Changing Analog TV settings (only for S800)	36
7.3 Changing Video Settings.....	37
7.4 Changing Audio Settings	39
7.5 Changing Record Settings.....	40

7.6 Changing Network Settings	42
7.7 Changing System Settings	44
7.8 Miscellaneous	49
8. Browser Menu	51
8.1 Browsing All	51
8.2 Browsing Music	52
8.3 Browsing Photos	52
8.4 Browsing Movies	53
8.5 Browsing via Network	53
8.6 Renaming / Deleting Files	57
8.7 Managing the Playlist	58
9. Media Library	59
9.1 Music Library.....	59
9.2 Photo Library	62
9.3 Movie Library	64
10. File Copy Menu	67
11. NAS Function	69
12. Listening to Internet Radio	70
12.1 Station List Menu.....	70
12.2 Genre List Menu	71
12.3 My Favorite Station	72
13. Upgrading the Firmware	73
14. Appendixes.....	75
14.1 Specifications	75
14.2 Frequently Asked Questions	77
14.3 Copyrights and Trademarks	79
14.4 Warranty.....	80
14.5 License information	80

1. Introduction

1.1 Preface

Dear Customer,

Thank you very much for purchasing the Movie Cube S800. In the digital era, this product is a great home entertainment partner. With the outstanding design, you can enjoy movies and music, view photos of precious moments, and record your favorite TV or movie programs and view them in your own time. The editing function provides you with an easy way to save these. It's easy to use this product as a portable external storage device with its built-in HDD and high-speed USB 2.0.

This player has the following functionality:

- | | |
|------------------|--|
| Video Recording | - supports one button recording and scheduled recording, can easily record programs from DVB-T / Analog TV, DVD player, DV, etc., and save as MPEG-2 (.mpg, or .ts) format; also can edit the recorded titles; |
| | - Time shifting function. |
| Movie Playback | - supports VOB (DVD), IFO (DVD), MPG (MPEG-2/1), AVI (MPEG-4 ASP: XviD), DAT (VCD), and MPEG-2 TS files; resolution up to 1080i. |
| Music Playback | - supports MP3, OGG, and WMA files; |
| | - supports one button playlist music playback. |
| Photo Playback | - supports digital camera JPEG, and BMP files. |
| Data Storage | - works as a portable hard disk using USB 2.0 port. |
| USB HOST | - supports two USB 2.0 host ports. |
| Network Function | - Ethernet & WLAN streaming playback and NAS function (Wireless function supported by the optional Wireless LAN USB Adapter); |
| HDMI | - High-Definition Multimedia Interface transmits the highest quality digital video and audio via a single cable, simplifies cabling and provides high quality home theater experience. |
| SCART | - supports Euro SCART output. |
| Analog TV | - supports analog PAL B/G, D/K, I, SECAM L and L' reception. |
| DVB-T TV | - supports Digital Video Broadcasting Terrestrial (DVB-T) TV reception; |
| | - supports Electronic Program Guide (EPG) and Teletext. |

Tuners are only available on the S800 Movie Cube

We hope that this product will bring you a lot of enjoyment. We are committed to apply multimedia technology in your work, entertainment, family, daily life, car and everywhere! Welcome to EMTEC. Thank you again for choosing our Movie Cube S700/S800.

Note:

1. WMA Pro & Advanced Profile and WMA with DRM are not supported.
2. You can find forums on the Internet where users responding to most of your questions on all models of Movie Cube as www.mhdworld.com

1.2 Packing List

Part	Quantity
Player	1
A/V cable	1
YUV cable	1
SCART out adapter	1 (no need for USA)
USB cable	1
Remote Control	1
Remote Control Battery	2
AC/DC adaptor	1
AC/DC adaptor Power Cord	1
English User Manual (printed)	1
Quick Installation Guide	1
Warranty card	1
Driver CD (with User Manual)	1
Rubber feet	4
Wireless LAN USB Adapter	1 (optional)
DVB-T Antenna	1 (optional)

Note:

The actual contents in the package might be different from the packing list in this manual

1.3 Caution

This player's design and manufacture has your safety in mind. In order to safely and effectively use this player, please read the following before usage.

1.3.1 Usage cautions

User should not modify this player. If commercial hard disk is being used, the environmental temperature should be within +5°C ~ +35°C.

1.3.2 Power

The player's power voltage: DC 12V.

When using this player, please connect the supplied AC adapter or AC adapter cable to the player's power jack. When placing the adapter cable, make sure it can not get damaged or be subject to pressure. To reduce the risk of electric shock, unplug the adapter first before cleaning it. Never connect the adapter to the player in a humid or dusty area. Do not replace the adapter or cable's wire or connector.

1.3.3 Radio interference/compatibility

- If not properly shielded, almost all electronic devices will get radio interference. Under some conditions, your player might get interference.
- The design of this player has followed the FCC/CE standard, and has followed the following rules:

(1) This player may not cause harmful interference;

(2) This player could accept some interference received including interference that may cause undesired operation.

1.3.4 Repair

If the player has a problem, you should take it to an appointed repair center and let the specialists do the repair, never repair the player yourself, you might damage the player or endanger yourself or your data.

1.3.5 Disposing of the player

When you dispose of the player, be sure to dispose it appropriately. Some countries may regulate disposal of electrical device, please consult with your local authority.

1.3.6 Hard disk cautions

The player uses an internal hard disk for data storage, in normal case, format or repair is not required.

You should carefully read the < Frequently Asked Questions > chapter, and check our website for latest information before formatting the hard disk.

- Physical impact may create bad sector in the hard disk, you can use CHKDSK to fix the problem.
- All data stored in the player may be lost due to physical impact, electrical shock, power lost, HDD format etc. Please backup your data.
- It is suggested to do defragment after a long period of usage.
- Regularly backup the data in the hard disk so that it can be recovered in the event of data corruption or loss. Our company takes no responsibility for loss of data stored on the hard disk.

1.3.7 Others

When using this player, please do not let the player come into contact with water or other liquid, if water is accidentally spilled on the player, please use a dry cloth to absorb the spillage.

 
Electronic products are vulnerable, when using please avoid shaking or hitting the player, and do not press the buttons too hard.

- ✧ Do not let the player come into contact with water or other liquid.
- ✧ Do not disassemble the player, repair the player or change the design of the player, any damage done will not be included in the repair policy.
- ✧ Do not press the buttons of the player too hard.
- ✧ Avoid hitting the player with hard object, avoid shaking the player, and stay away from magnetic fields.
- ✧ During electrostatic discharge and the strong electromagnetic field, the product will malfunction, then unplug the power cable and the product will return to normal performance next time it is powered on.

1.4 Connection


1.4.1 Connect to Computer

- (1) Make sure the player is powered on;
- (2) Plug in the squarish connector of the USB cable to this player's USB DEVICE port;
- (3) Plug in the rectangular connector of the USB cable to computer.

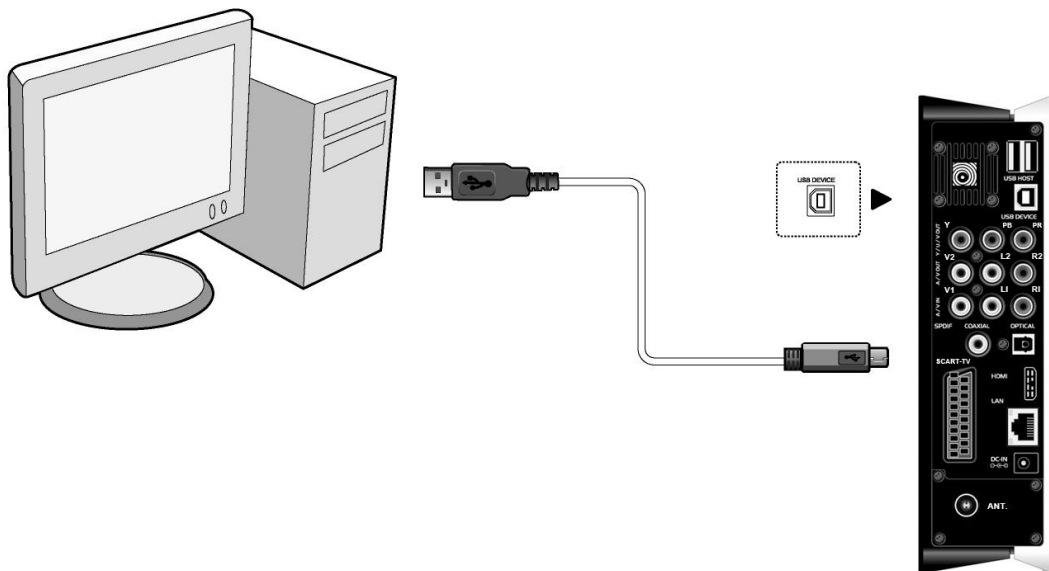

1.4.2 USB Mass Storage Device (like USB stick, MP3, USB HDD etc.) Connection

 - (1) Make sure the player is powered on;
- (2) Plug in the USB stick or USB HDD etc. to one of the USB host ports of this player.

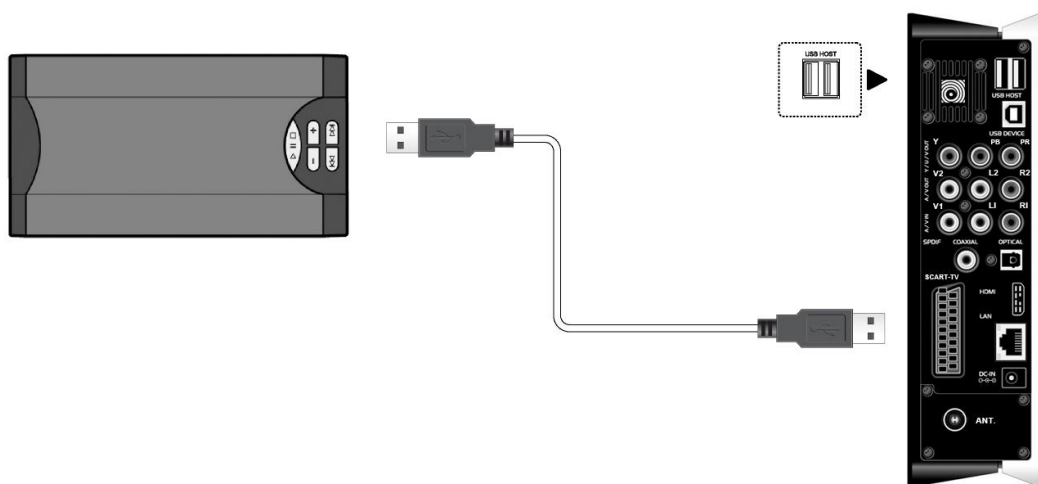


1.4.3 TV connection

1.4.3.1 A/V IN

- (1) Follow the picture and plug in the 3 color connector to the player's A/V IN jack;
- (2) Follow the picture and plug in the 3 color connector to the A/V OUT jack of the TV/IPTV Set-Top Box (STB).

 In this way, you can record TV programs from the TV/IPTV Set-Top Box.

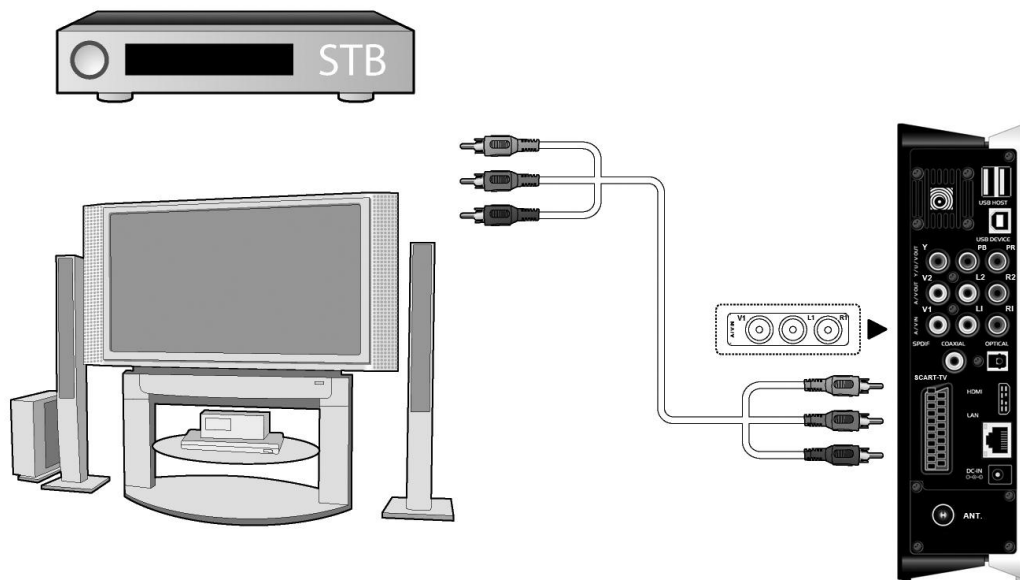


1.4.3.2 A/V OUT

(1) Follow the picture and plug in the 3 color connector to the player's A/V OUT jack;

(2) Follow the picture and plug in the 3 color connector to the TV's A/V IN jack.

 
In this way, you can enjoy the content in the player on TV or other display devices.

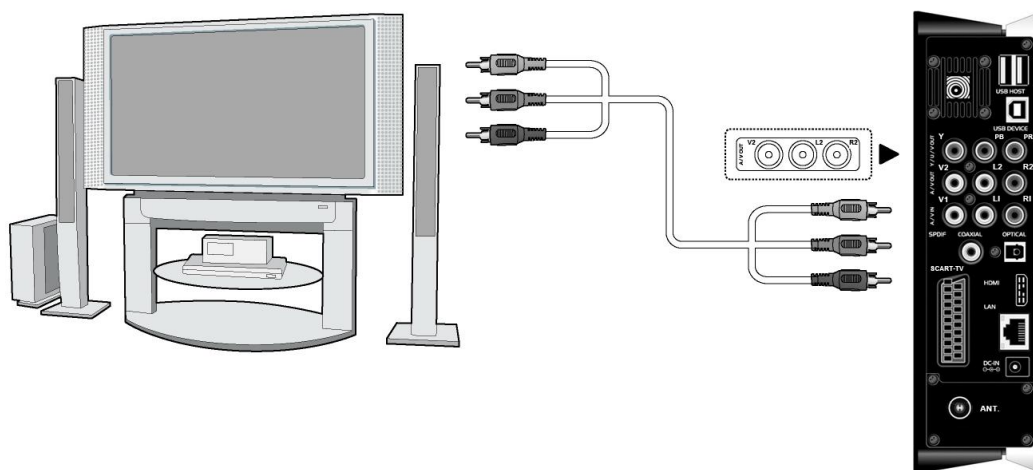

1.4.3.3 SCART OUT

(1) Follow the picture and plug one connector on the SCART cable to the player's SCART socket;

 (2) Follow the picture and plug the other connector on the SCART cable to the TV's SCART socket.

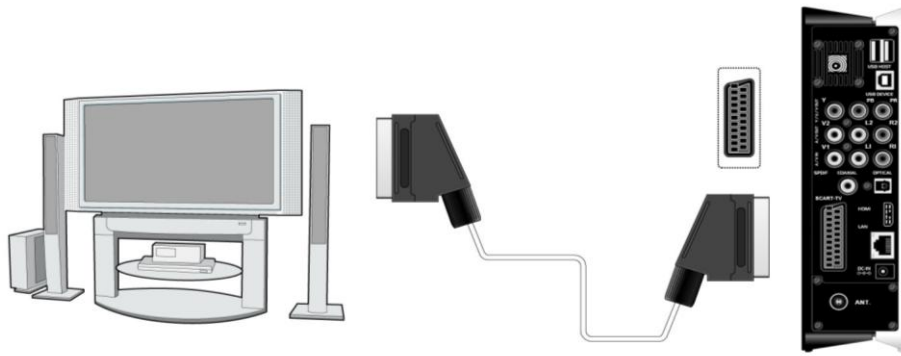

1.4.3.4 Y/Pb/Pr Component OUT

 
(1) Follow the picture and plug in the 3 color connector to the player's Y/Pb/Pr jack;

(2) Follow the picture and plug in the 3 color connector to the TV's Y/Pb/Pr jack.

Audio Connection while using Y/Pb/Pr Video out:

First method: use the audio output from the A/V OUT jack;

Second method: use the audio output from the S/PDIF Coaxial or Optical jack.

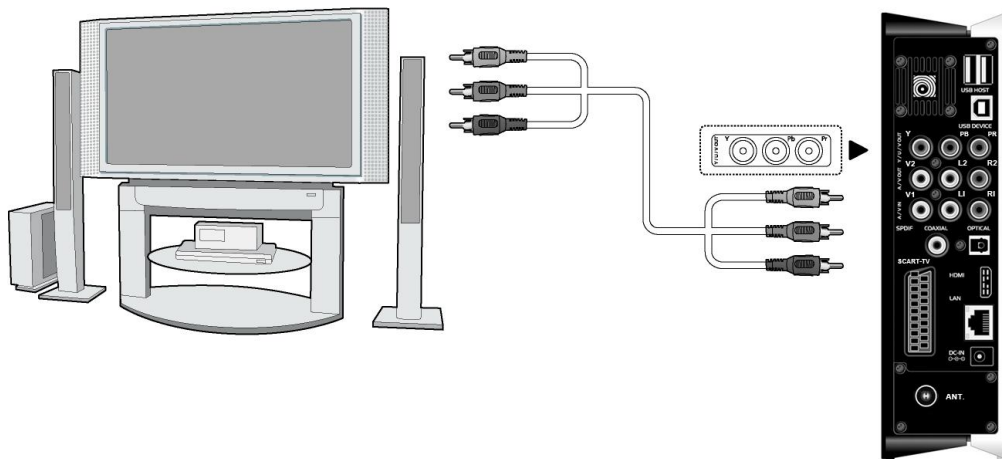


In this way, you can also enjoy videos, music, and photos in the player on TV.

1.4.3.5 HDMI OUT

(1) Follow the picture and plug one connector on your HDMI cable to the player's HDMI jack;

 (2) Follow the picture and plug the other connector on your HDMI cable to the TV's HDMI jack.

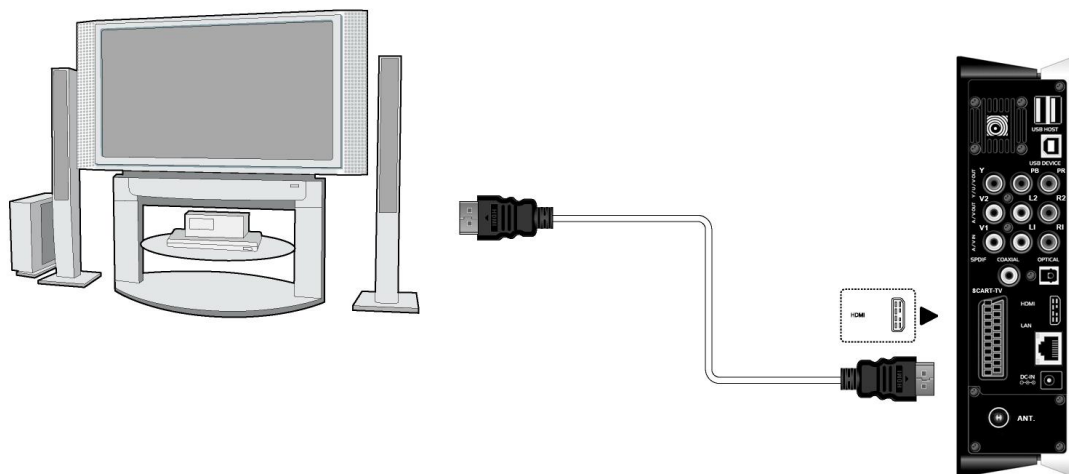

In this way, you can have the highest quality video and audio via a single cable.

1.4.3.6 ANT. / RF IN (only for S800)

 
Follow the picture and plug a TV Aerial or analog TV cable to the ANT. / RF IN socket;



1.4.4 Digital Audio Device connection


(1) Follow the picture and plug in the RCA connector on your coaxial cable to the player's S/PDIF Coaxial jack. Or if you use optical fiber, please plug in the Toslink connector on your optical fiber to the player's S/PDIF Optical jack;(not supplied)

(2) Follow the picture and plug in the other connector on your coaxial cable or optical fiber to the digital audio device.(not supplied)

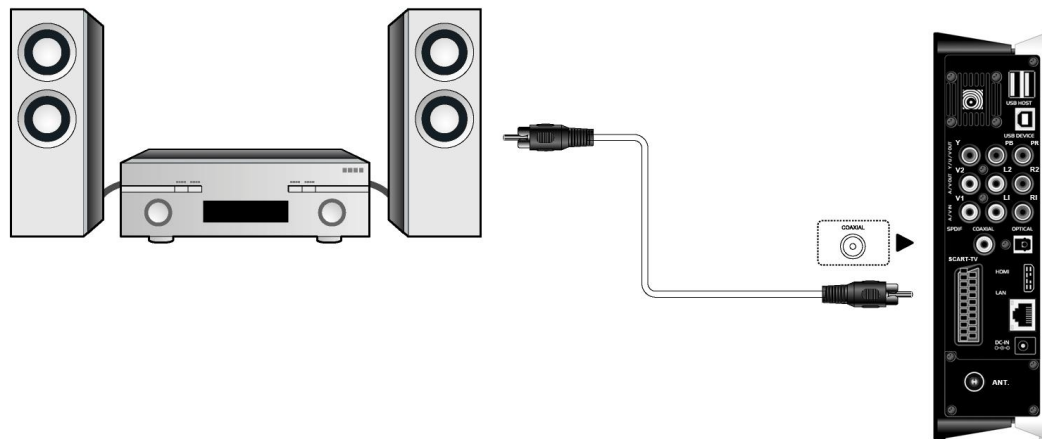

1.4.5 Power connection

 
- (1) Follow the picture and connect the AC adaptor to the player's DC IN jack;
- (2) Follow the picture and plug in the AC adaptor to the power outlet.

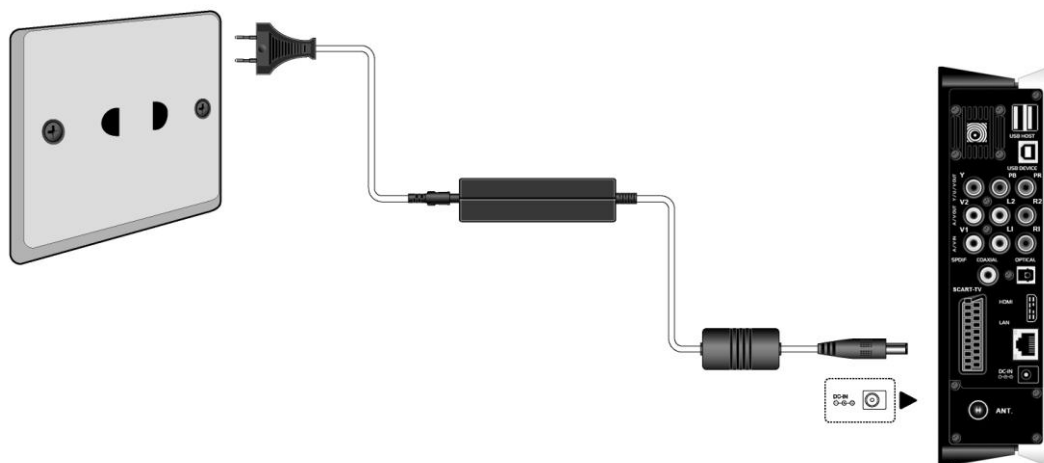

1.4.6 Ethernet connection


To connect to a LAN (Local Area Network) you require a cat5, cat5e or cat6 network cable (not supplied).

 - (1) Connect one of the crystal plugs on the cable to the player's RJ45 LAN socket;
- (2) Connect the other crystal plug on the cable to a RJ45 LAN port on your router, switch, or hub devices.

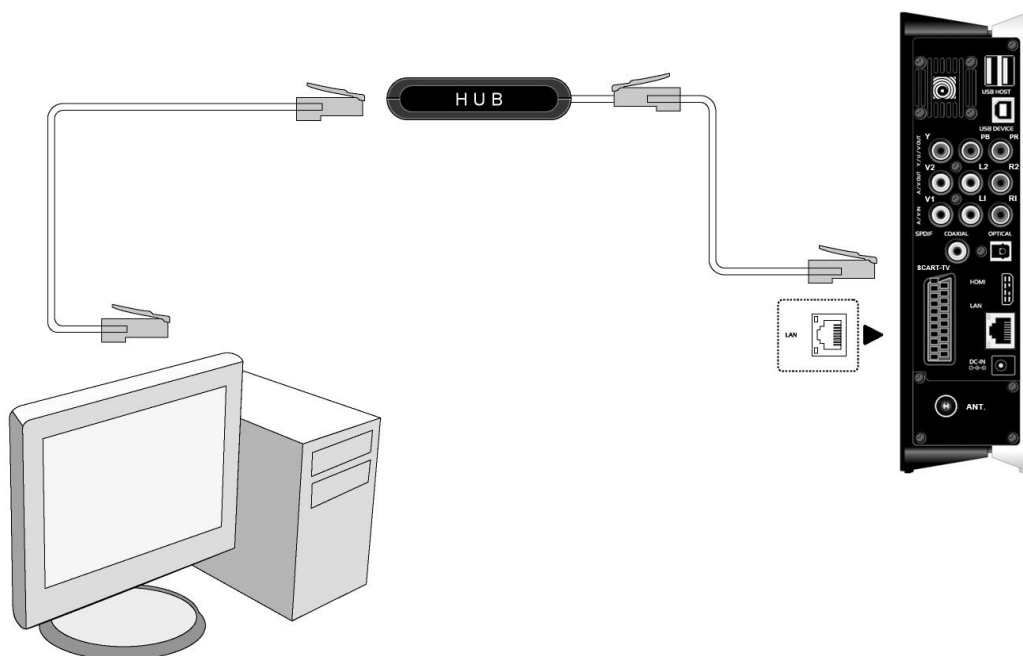

1.4.7 WLAN connection

 - (1) Make sure the player is powered on;
- (2) Plug the Wireless LAN USB Adapter (i.e. Wi-Fi USB Dongle) to the USB HOST port of the player.

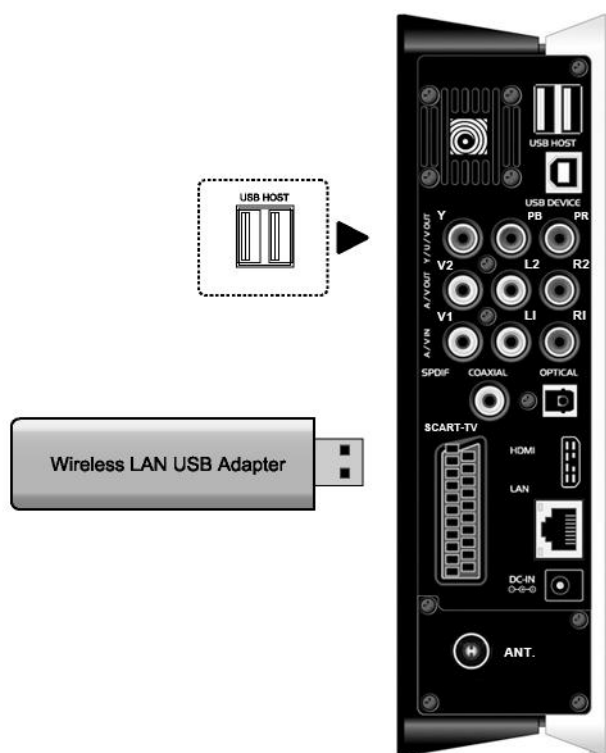

1.5 First Time Usage

 
1.5.1 Firmware Installation

For users who bought the player without a HDD inside, and want to install a SATA HDD, please see '**HDD Format**' in '**7.7 Changing System Settings**' for details.

1.5.2 Remote Control

First time usage of Remote control

Install the batteries before using the remote control, installation steps are as the picture shows:

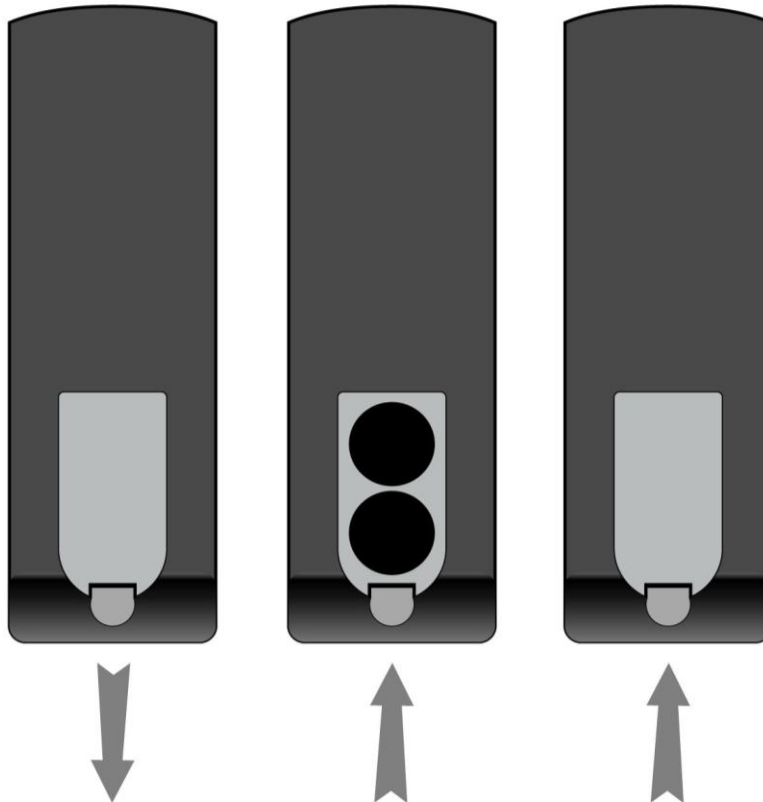

1.5.3 Power on/off, language control

1. Power on

After connecting the power supply cord and press the **power / standby** button on the front panel or remote control, the player will soon enter the main interface, and the POWER indicator on the front panel will turn blue.

2. Power off

When the system is running, press the **power / standby** button on the front panel or remote control, the player will enter standby mode, and the POWER indicator on the front panel will turn red; you can also press and hold the **power / standby** button on the front panel for 2 seconds to power off the unit while the system is alive.

 
3. Language control

The system language of this player can be set to English or other languages. In the setup interface is language setup, the selected language will take effect immediately.

2. About the Player

2.1 Remote Control

All procedures in this manual can be carried out using the remote control buttons. See the following for details on each button and its function:

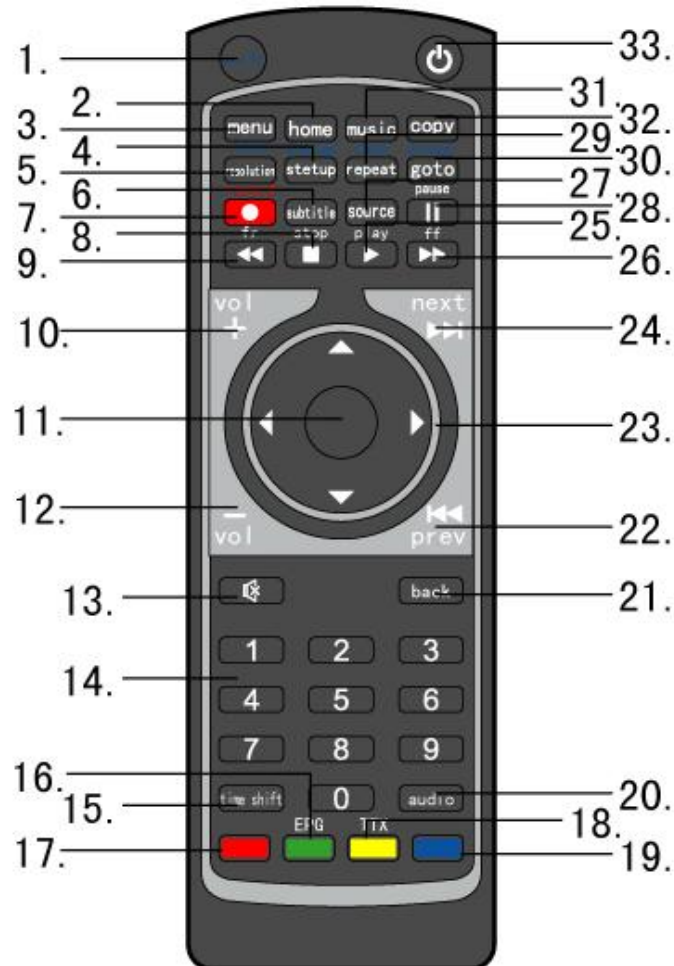

Note: The buttons marked '*' ahead are for S800 only.

1. shift	2. home	3. menu	4. setup (display)	5. resolution (zoom)
6. subtitle	7. record	8. stop	9. fr	10. vol +
11. enter	12. vol -	13. mute	14. numeric buttons	
15. time shift	16. EPG <green>	17. red	18. TTX <yellow>	19. blue
20. audio	21. back	22. prev	23. navigational buttons	
24. next	25. play	26. ff	27. source	28. pause
29. repeat (timer)	30. goto (browser)	31. music	32. copy	33. power / standby


No.	Name	Function
1	shift	shift button: Press to shift the resolution , setup , repeat , and goto buttons to be zoom , display , timer , and browser .
2	home	home button: Press to view the main interface.
3	menu	menu button: Press to activate tools menus: <ul style="list-style-type: none"> ● Press in the browser menu to rename and delete files. ● Press in My_Shortcuts in NET of the browser menu to add shortcuts for network access.
4	setup (display)	setup button: Press to enter the setup menu. display button: Press to display current status. <ul style="list-style-type: none"> ● Press during playback and an on-screen display appears, showing track number and time elapsed/remaining. ● Press during recording and an on-screen display appears, showing the recording quality setting and time elapsed. ● Press during live TV and an on-screen display appears, showing the current channel number and time. ● Press during time shifting to turn the time shifting bar on/off.
5	resolution (zoom)	resolution button: Press to switch between NTSC, PAL, 480P, 576P, 720P, and 1080I. zoom button: Press to zoom in/out the image (photo or video).
6	subtitle	subtitle button: Press to set subtitle options.
7	record	record button: Press to begin recording or to resume when recording has been paused. Press repeatedly to set one touch recording (OTR) length (30 MIN. / 60 MIN. / 90 MIN. / 120 MIN. / 180 MIN. / 240 MIN. / Off).

8	stop	stop button: Press to stop playback.
9	fr	fast rewind button: Press to fast rewind the current playback. Press repeatedly to select speeds.
10	vol +	vol + button: Press to increase the volume.
11	enter	enter button: Press to select options in menus.
12	vol -	vol - button: Press to decrease the volume.
13	mute	mute button: Press to mute audio output, and press again to resume.
14	numeric buttons	numeric buttons: Press to enter channel numbers or numeric input when changing settings.
15	time shift	time shift button: While in the DVB-T / Analog TV or A/V IN mode, press to activate the time shift function, which allows you to pause live TV and resume the program from the point you left it. While paused, the program is recorded to the internal HDD as long as the space is available. Press to activate the time shift function and wait for the play arrow to appear on the screen. Press the pause button and the program will be paused. Press the play button to resume viewing the program. Time shift mode remains active until you press the stop button.
16	EPG <green>	EPG button: Press to enter the Electronic Program Guide which displays an on-screen list of programs for the coming week when watching Digital Terrestrial TV.
17	red	red button: Reserved button. No function has been assigned to it yet.
18	TTX <yellow>	TTX button: Press to open Teletext OSD if it is available in the broadcasted stream of Digital Terrestrial TV.

19	blue	blue button: Reserved button. No function has been assigned to it yet.
20	audio	audio button: Press to select an audio track.
21	back	back button: Press to go back to the previous screen when navigating menus.
22	prev	previous button: Press to go to the previous file or the previous chapter on a title.
23	navigational buttons	navigational button: Press the arrow buttons to select menu options.
24	next	next button: Press to go to the next file or the next chapter on a title.
25	play	play button: Press to begin the playback of a title.
26	ff	fast forward button: Press to fast forward the current playback. Press repeatedly to select speeds.
27	source	source button: Reserved button. No function has been assigned to it yet.
28	pause	pause / step button: Press to pause the current playback. Press again to step to the next frame. Press the play button to resume the playback.
29	repeat (timer)	repeat 1/all button: Press to set repeat option - Chapter, Title or Off. timer button: Press to enter the timer menu to add, edit and delete recording schedules. See ' 6.1 Creating a New Schedule ' for more details.
30	goto (browser)	goto button: Press to jump to a specific point on a title. Specify the point using Title, Chapter and Time. browser button: Press to browse music, photo, and movie files on USB, HDD, and NET.


31	music	music button: Press to start playing music in the playlist.
32	copy	copy button: Press to enter the file copy menu.
33	power / standby	power / standby button: Press to enter standby mode or wake up.

 2.2 Front Panel

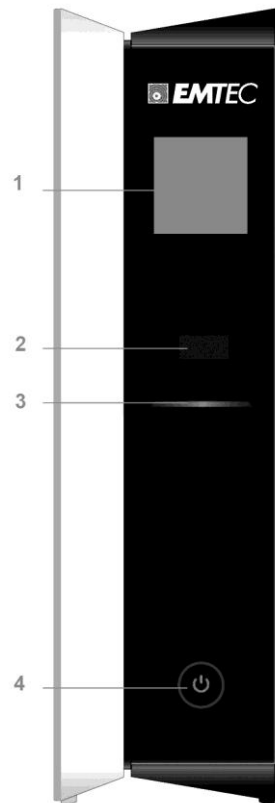

No.	Name	Function
1	LCD screen	Menu & icon information will be displayed on the screen.
2	Infrared receiver window	Receiving IR signals from the remote control.
3	REC indicator	Indicator (blue) turns on when the system is alive; Indicator (red) turns on when recording starts.
4	POWER / STANDBY button	Press to enter standby mode or wake up.

 2.3 Rear Panel

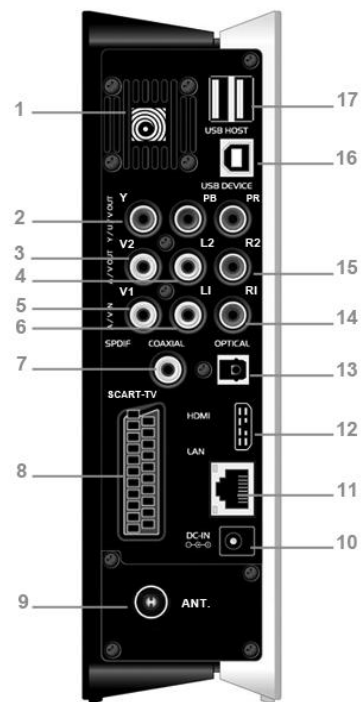

- | | |
|--|---------------------------------------|
| 1. Air Flow hole | 2. Y/Pb/Pr OUT jack |
| 3. V2: Video OUT jack | 4. L2: Audio OUT jack (Left Channel) |
| 5. V1: Video IN jack | 6. L1: Audio IN jack (Left Channel) |
| 7. S/PDIF COAXIAL jack | 8. SCART - TV socket |
| 9. ANT. / RF IN socket | 10. DC-IN jack |
| 11. RJ45 LAN socket | 12. HDMI jack |
| 13. S/PDIF OPTICAL jack | 14. R1: Audio IN jack (Right Channel) |
| 15. R2: Audio OUT jack (Right Channel) | 16. USB DEVICE port |
| 17. USB HOST port x 2 | |

3. Getting Started

Power on the system, and after a few seconds, the system will enter the main interface. To return to this menu, you can also press the **home** button on the remote control.



3.1 Selecting DVB-T TV (only for S800)

In this menu, you can watch and record Digital Terrestrial TV programs, or have the time shift function.

Select the **DVB-T** icon on the main interface to enter this menu.

3.2 Selecting Analog TV (only for S800)

In this menu, you can watch and record Analog TV programs, or have the time shift function.

Select the **Analog TV** icon on the main interface to enter this menu.

3.3 Selecting A/V In – Signal from the A/V IN jack

In this menu, you can watch and record audio-visual signal from the A/V IN jack on the rear panel of the unit, or have the time shift function.

Select the **A/V In** icon on the main interface to enter this menu.

3.4 Selecting Playback – Playback and Edit Recorded Titles

A clip recorded on HDD or USB device is called a Title.

In this menu, you can playback the recorded video or TV programs; you can also Merge/Split/Delete/Edit all the recorded titles.

Select the **Playback** icon on the main interface to access the title list menu.

3.5 Selecting Browser – Playback Multimedia Files

You can browse all the multimedia (Videos/Music/Photos) files on the internal HDD, USB or Network, and playback them on TV.

Press the **browser** button on the remote control or select the **Browser** icon on the main interface to browse movie, photo, and music files stored either on a HDD, USB device, or Network.

3.6 Selecting Media Library

In this menu, you can search multimedia files stored on the internal HDD.

Select the **Library** icon on the main interface to enter this menu.

3.7 Selecting Internet Radio

In this menu, you can listen to the SHOUTcast free radio programs on the Internet.

Select the **Internet Radio** icon on the main interface to enter this menu.

4. Watching Analog & DVB-T TV programs (only for S800)

Equipped with an internal Hybrid TV Tuner, this player integrates Analog and Digital Terrestrial TV receiving. Please refer to '**7.1 Changing DVB-T TV settings**' and '**7.2 Changing Analog TV settings**' in order to make correct settings before reading the following chapters.

4.1 Watching Analog TV programs (only for S800)

To enter the Analog TV mode, select the **Analog TV** icon on the main interface.

The following are some functional buttons on the remote control available when watching Analog TV programs.

Name	Function
up / down	Press to switch channels. (Channels cannot be switched in the recording mode.)
prev / next	
numeric buttons	Press to input channel numbers. Press the enter button to confirm.
record	Press to start recording the current TV program.
time shift	Press to activate the time shift function.
timer	Press to edit scheduled recordings.
zoom	Press to zoom out the image.

4.2 Watching DVB-T TV programs (only for S800)

To enter the DVB-T TV mode, select the **DVB-T** icon on the main interface.

The following are some functional buttons on the remote control available when watching Digital TV programs.

Name	Function
enter	Press to view the program list menu.
up / down	Press to switch channels. (Channels cannot be switched in the recording mode.)
prev / next	
numeric buttons	Press to input channel numbers. Press the enter button to confirm.
goto	Press to switch between the last two viewed channels.
record	Press to start recording the current TV program.
time shift	Press to activate the time shift function.
timer	Press to edit scheduled recordings.
subtitle	Press to activate the subtitle list menu if available.
EPG	Press to activate the EPG menu if available.
TTX	Press to activate the Teletext menu if available.
zoom	Press to zoom out the image.

4.2.1 Program List Menu

Press the **enter** button when watching DVB-T TV programs, and the program list menu where you can see the program number and name will be displayed.



Press the **left** / **right** button to select from TV and Radio. Press the **prev** / **next** button to page up /down. Press the **up** / **down** button to select channels, and press the **enter** button to confirm.

4.2.2 Info Bar

While switching channels by the **up** / **down** button, an info bar will be displayed to show the channel information.



There're 4 strings displayed on the bar. Taking the info bar in the above photo for example:

N/A – Stands for TV rating;

ENG – Stands for the voice language;

SS – Stands for subtitle;

TT – Stands for Teletext;

480 – Stands for resolution (SD - Standard Definition, HD – High Definition).

When the string looks concave, the option will be available.

4.2.3 Electronic Programming Guide

Press the **EPG** button when watching DVB-T TV programs, the Electronic Programming Guide will be displayed.



Press the **prev / next** button to change channels. Press the **left / right** button to change date. Press the **up / down** button to change program. Press the **timer** button to add / delete scheduled recording.

4.2.4 Teletext Menu

If the broadcasted stream supports Teletext, press the **TTX** button to enter the Teletext menu.



Press the **navigational** and **numeric** buttons to view the content in the Teletext menu.

4.2.5 Subtitle List Menu

 
Press the **subtitle** button when watching DVB-T TV programs, the Subtitle List menu will be displayed. Press the **left / right** button to switch between Subtitle List and TTX Subtitle List



Press the **up** / **down** button to select the subtitle, and press the **enter** button to confirm.

5. The Title List Menu for Recorded Videos

The **Title List** menu allows you to play and edit all saved titles. To enter the menu, select the **Playback** icon on the main interface.

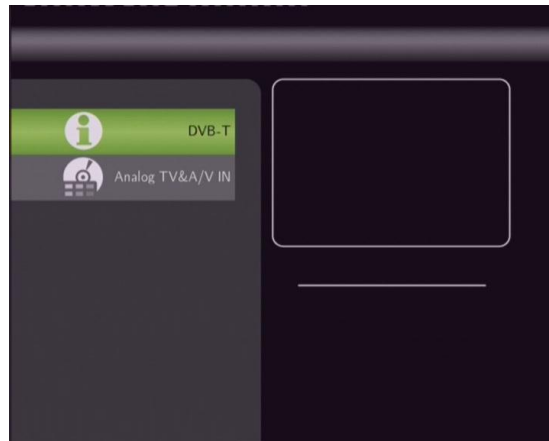

Press the **up** / **down** button on the remote control to select from **DVB-T** and **Analog TV & A/V IN** to view and edit recorded DVB-T or Analog TV programs.

5.1 Title List Menu



Number	Function	Description
1	Menu Bar	Press the left / right button to scroll through the menu. Here you can Play / Delete / Rename / Sort / Edit a recorded title.
2	Title Lists	Here lists all recorded titles. Here you can see thumbnail / length / quality / recorded channel / recorded date & time of a title. A ★ sign shows this recorded title has not been watched. A ● sign shows this title is being recorded now.
3	Information	Here you can see a playback progress bar of a title, the

		remained free space of HDD, and remained recording time of each quality.
4	Preview	Shows the preview window.

5.2 Playing Back Titles

 
To play a recorded title, do the following:

1. Press the **left** / **right** button on the remote control to select the **Play** tab from the menu bar.
2. Press the **up** / **down** button on the remote control to select the title you wish to play.
3. Press the **enter** button on the remote control to play the file.
4. Press the **stop** or the **back** button on the remote control to stop playback and return to the Title List menu screen.

5.3 Deleting Titles

To delete a title, do the following:


1. Press the **left** / **right** button on the remote control to select the **Delete** tab from the menu bar.
2. Press the **up** / **down** button on the remote control to select the title you wish to delete.
3. Press the **enter** button to confirm and delete the file.
4. A confirmation message appears. Press the **up** / **down** button and select **OK**.
5. Press the **enter** button to delete the selected file. To cancel delete, select **Return**.

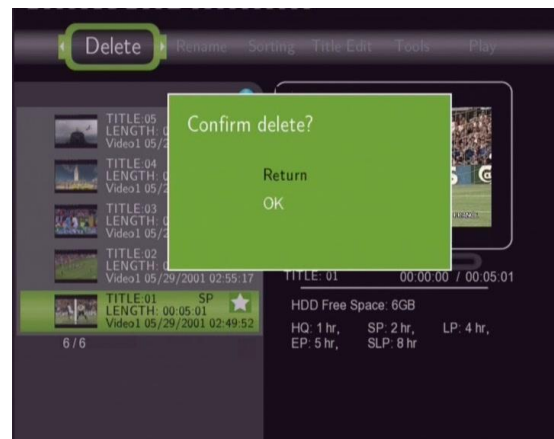

5.4 Renaming Titles

To rename a title, do the following:

 1. Press the **left** / **right** button on the remote control to select the **Rename** tab from the menu bar.
2. Press the **up** / **down** button on the remote control to select the file you wish to rename.
3. Press the **enter** button on the remote control. The name entry screen appears.

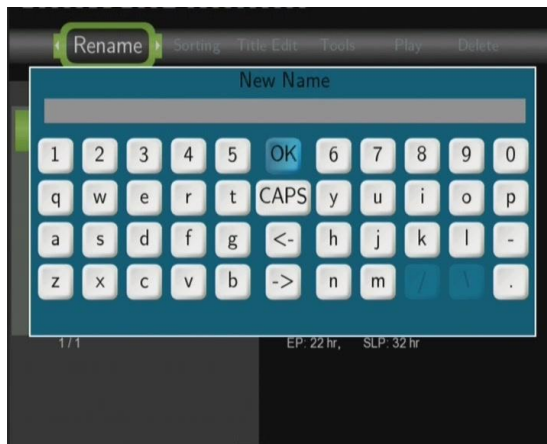


4. Press the navigation buttons to select letters and numbers. Select **CAPS** to toggle between uppercase and lowercase letters. Press <- to delete a letter. Press -> to insert a space. Press the **enter** button to input each letter or number.






5. Once you have entered the new name, select **OK** and press the **enter** button to confirm all changes.

 If you want to cancel the renaming during the process, press the **back** button.

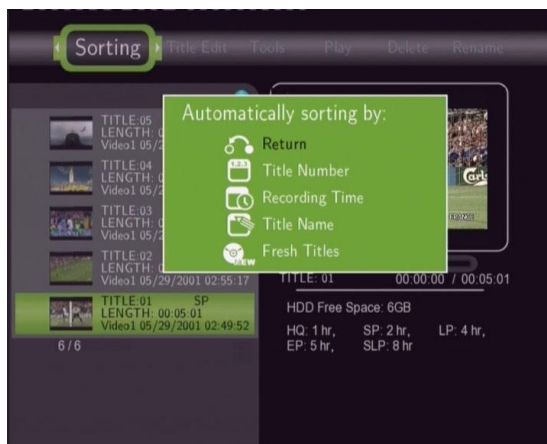5.5 Sorting Files

 
Press the **left / right** button on the remote control to select the **Sorting** tab from the menu bar. Press the **enter** button, and the menu appears.





 

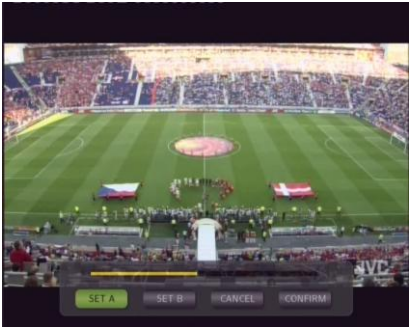 
	Return	Select to return to the main screen.
	Title Number	Select to sort all files according to title numbers.
	Recording Time	Select to sort all files according to the length of the recordings
	Title Name	Select to sort all files alphabetically, according to title name.
	Fresh Titles	Select to sort all files according to freshness (i.e. the most recent recordings), listing the most recent recording first.

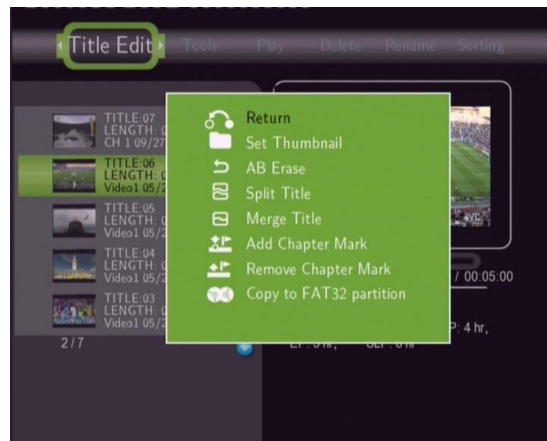


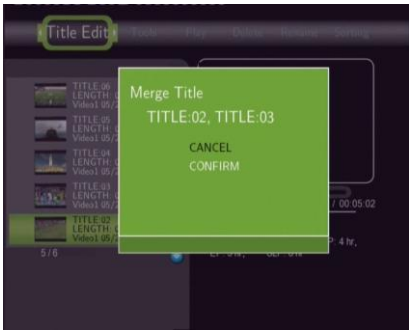 

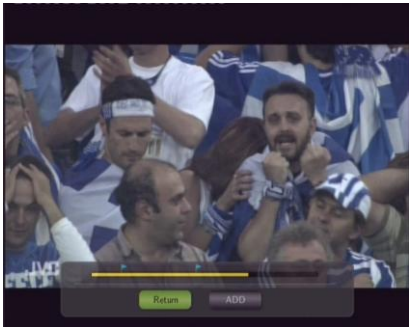 

5.6 Title Edit Menu


Press the **left** / **right** button on the remote control to select the **Title Edit** tab from the menu bar. Press the **enter** button, and the menu appears.

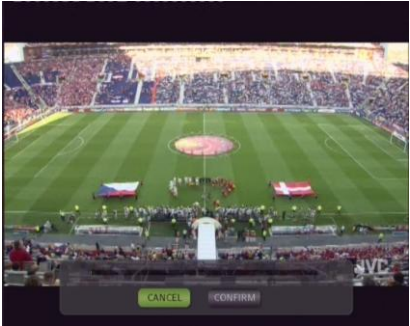

Menu only available with the Analog & AV IN TV, not with the DVB-T


	Return	Select to return to the main screen.
	Set Thumbnail	<p>Select to change a thumbnail of the selected video. Press the up / down button on the remote control to select Set Thumbnail, an editing screen appears. You can press the ff / fr button to fast forward or fast rewind when searching a proper point. When you reach the point at which you wish to insert a thumbnail, press the left / right button to select CONFIRM and press the enter button.</p> 
	AB Erase	<p>Delete a specified clip in a title.</p>  <p>Select SET A and press the enter button to mark the</p>

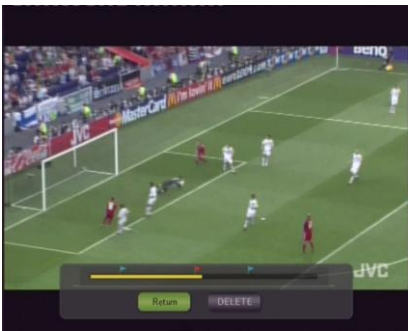 

		start for the section to be deleted. Select SET B and press the enter button to mark the end of the section to be deleted. Select CONFIRM and press the enter button to delete the section.
	Split Title	<p>Select a title and divide it into sections.</p> <p>When you reach the point at which you wish to split the track, press the enter button to confirm.</p> 
	Merge Title	<p>Select more than two titles and combine them into one title. A confirmation message appears. Select CONFIRM to merge the files.</p> 
	Add Chapter Mark	<p>Add a chapter mark to the selected file.</p> <p>A chapter mark is a marker inserted into the title. You can jump between marked sections by pressing the prev / next button on the remote control.</p> <p>An editing screen appears. When you reach the point at which you wish to add the mark, press the enter button to confirm.</p> 
	Remove Chapter Mark	<p>Remove a chapter mark that you have inserted. An editing screen appears. Use the prev / next button to select the mark you wish to remove and press the enter button to delete.</p>

		
	Copy to FAT32 partition	Copy function. In the Title List Menu, press the up / down button on the remote control to select which title you want to copy from the UDF partition to the FAT32 partition.

 5.7 Tools

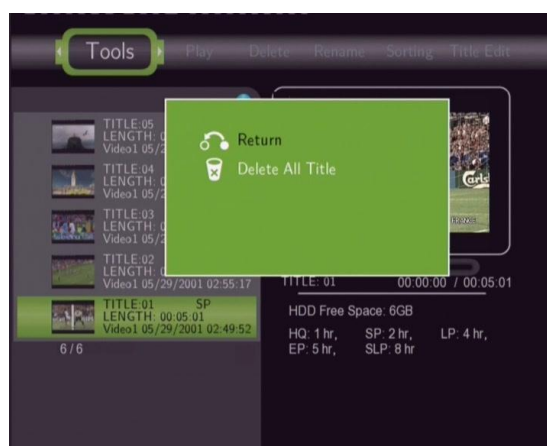Press the **left / right** button on the remote control to select the **Title Edit** tab from the menu bar. Press the **enter** button and the menu appears.



	Return	Select to return to the main screen.
	Delete All Title	Select to delete all titles.

5.8 Saving Your Recorded Titles

All the recorded titles are stored temporarily in a recording disc partition (UDF format) which cannot be identified by personal computers. If you want to share the recorded titles on your computer, please copy the titles from the recording disc to the multimedia disc which is in FAT32 format first. See **Copy to FAT32 partition** in '**5.6 Title Edit Menu**' for more details.

6. Timer Record Menu

The **Timer Record** menu allows you to create, edit and delete recording schedules and view all schedule status and history. Press the **timer** button on the remote control to enter the menu.

6.1 Create a New Schedule

Press the **left / right** button on the remote control to select the **Edit** tab from the menu bar. Select **Add a New Schedule** and press the **enter** button. The schedule setting screen appears.



Use the **left / right** button on the remote control to move between fields and press the **up / down** button to adjust each setting.

Source	Select the video source or TV channels for the recording.
Start Time	Enter the date and time of the recording.
Length	Enter the length of the recording
Repeat	Select how often you want the schedule to record. Choose from Once, Everyday, Mon-Fri, Mon-Sat or for an individual day of the week.
Quality	Select the recording quality. Choose from HQ, SLP, EP, LP and SP. The higher the quality, the more space required on the hard drive. See HDD Free Space on the left of the screen for details of how long you can record for using each setting.
Preview	This small preview window will show the current program of the selected channel.

6.2 Editing Schedule

 
Press the **left / right** button on the remote control to select the **Edit** tab from the menu bar.



Select the schedule you want to edit from the list and press the **enter** button. The schedule setting screen appears. Modify the schedule as described in '**6.1 Creating a New Schedule**'.

6.3 Deleting Schedules


Press the **left / right** button on the remote control to select the **Delete** tab from the menu bar. Select the schedule you want to delete and press the **enter** button. A confirmation message appears.

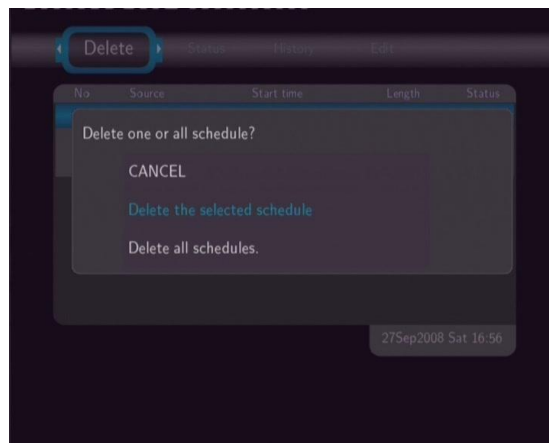

Select **CANCEL**, **Delete the selected schedule**, or **Delete all schedules**. Press the **enter** button to confirm.

6.4 Viewing Schedule Status

 Press the **left / right** button on the remote control to select the **Status** tab from the menu bar. The schedule list is displayed. Select a schedule and press the **enter** button.

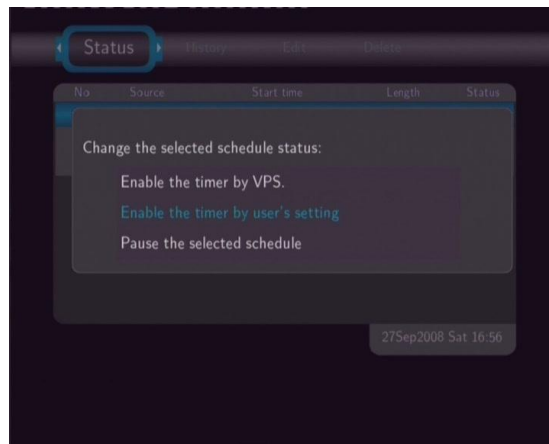

Select **Enable the timer by VPS**, **Enable the timer by user's setting** or **Pause the selected schedule**. Press the **enter** button to confirm.

6.5 Viewing Recording History

Press the **left** / **right** button on the remote control to select the **History** tab from the menu bar.

Here you can view a complete history of all recordings that were set.


Result	Source	Start time	Length	Device
OK	Dtv71	09/27 17:00	01:00	HDD

 
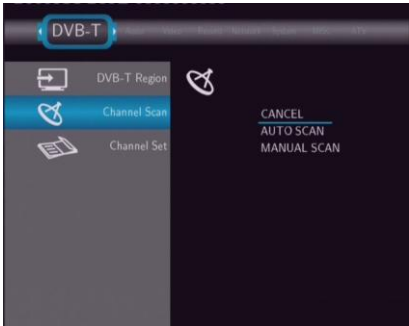 
7. Setup Menu

The Setup Menu allows you to configure DVB-T / Analog TV, video, audio, record, network and system settings. To enter the menu, press the **setup** button on the remote control.

7.1 Changing DVB-T TV settings (only for S800)

Press the **left** / **right** button on the remote control to select the **DVB-T** tab from the menu bar.

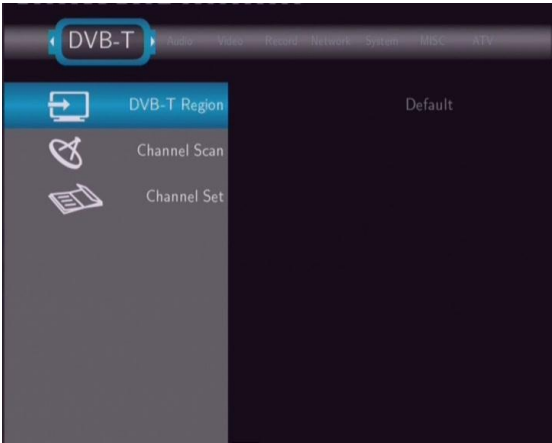


DVB-T Region	<p>Select to set the region for Digital Terrestrial TV.</p>  <p>Press the up / down button to select, and the enter button to confirm.</p>
Channel Scan	<p>Select to scan for available Digital Terrestrial TV channels.</p>  <p>Press the up / down button to select from AUTO SCAN and MANUAL SCAN, and press the enter button to confirm.</p> <p>AUTO SCAN</p>

	<div data-bbox="716 199 1126 526" data-label="Image"></div> <p>In AUTO SCAN mode, the system will automatically scan for available DVB-T TV channels.</p>
	<p>MANUAL SCAN</p> <div data-bbox="716 674 1126 1001" data-label="Image"></div> <p>In MANUAL SCAN mode, you can select the CH name, Bandwidth, and Input Frequency. Use the navigational and numerical buttons on the remote control to select or input. Press the enter button to confirm.</p>
<p>Channel Set</p>	<p>Select to edit channel information.</p> <div data-bbox="716 1189 1126 1516" data-label="Image"></div> <p>Press the up / down button to select DVB-T, and press the enter button to confirm.</p> <div data-bbox="716 1617 1126 1944" data-label="Image"></div> <p>In this menu, you can edit the Name, and sequence for the DVB-T TV channels. Use the navigational buttons to select and modify the settings,</p>




	and press the enter button to confirm. You can also press the red button to select Default, and press the blue button to select Sort.
--	--

7.2 Changing Analog TV settings (only for S800)

   Press the **left** / **right** button on the remote control to select the **ATV** tab from the menu bar.

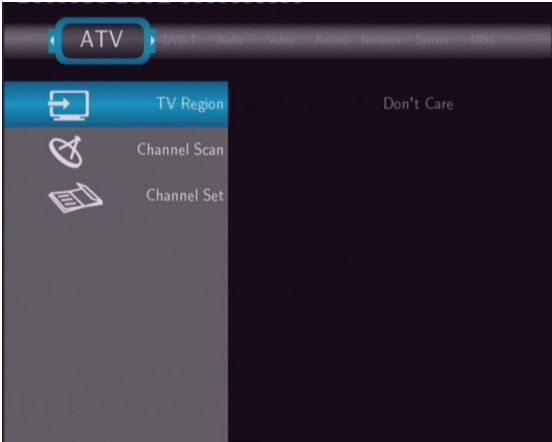 



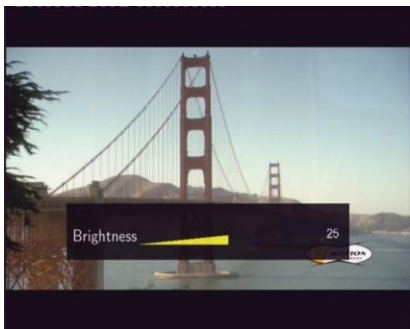 
Analog TV Region	<p>Select to set the region for Analog TV.</p> <p>Press the up / down button to select, and the enter button to confirm.</p>
Channel Scan	<p>Select to scan for available Analog TV channels.</p> <p>Press the up / down button to select from AUTO SCAN, and press the enter button to confirm.</p>

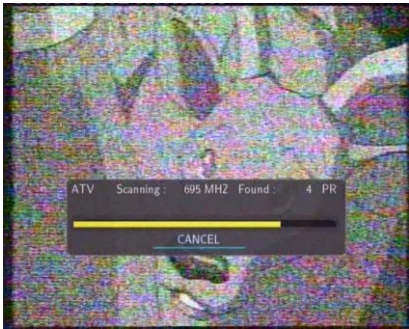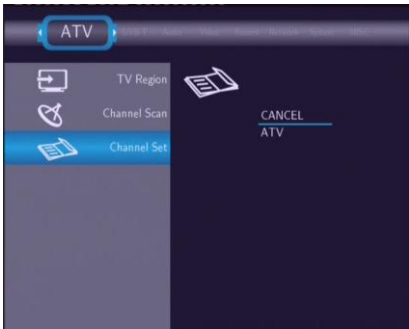

	 <p>In this menu, the system will automatically scan for available Analog TV channels.</p>
<p>Channel Set</p>	<p>Select to edit channel information.</p>  <p>Press the up / down button to select Analog TV.</p>  <p>In this menu, you can edit the Status, Name, Fine Tune, TV System, and sequence for the Analog TV channels. Use the navigational buttons to select and modify the settings, and press the enter button to confirm.</p>

7.3 Changing Video Settings

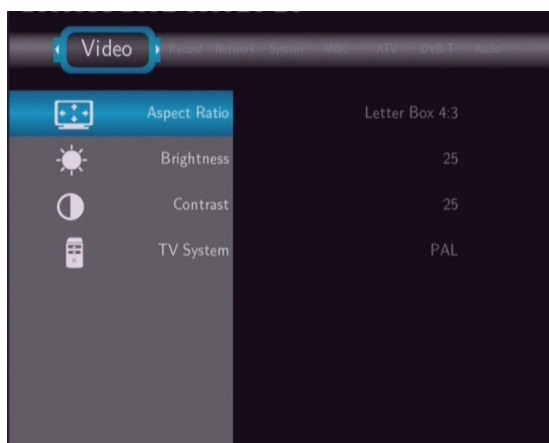Press the **left / right** button on the remote control to select the **Video** tab from the menu bar.




Aspect Ratio	<p>Select to set aspect ratio.</p>  <p>Press the up / down button to select from Pan Scan 4:3, Letter Box 4:3, or 16:9. Press the enter button to confirm.</p> <p>Pan Scan 4:3: Display a wide picture on the entire screen and cuts off the redundant portions. Select when a standard 4:3 TV is connected.</p> <p>Letter Box 4:3: Display a wide picture with two black borders on the top and bottom of 4:3 screen. Select when a standard 4:3 TV is connected.</p> <p>16:9: Compress the image to convert the whole image. Select when a 16:9 TV is connected.</p>
Brightness	<p>Select to set brightness levels.</p>  <p>Press the up / down button to adjust brightness. The new setting is previewed on screen. Press the enter button to confirm.</p>



Contrast	<p>Select to set contrast levels.</p>  <p>Press the up / down button to adjust contrast. The new setting is previewed on screen. Press the enter button to confirm.</p>
TV System	<p>Select to adjust TV system.</p>  <p>Press the up / down button to set the TV system, depending on your viewing preferences. Press the enter button to confirm.</p>

7.4 Changing Audio Settings

   Press the **left** / **right** button on the remote control to select the **Audio** tab from the menu bar.

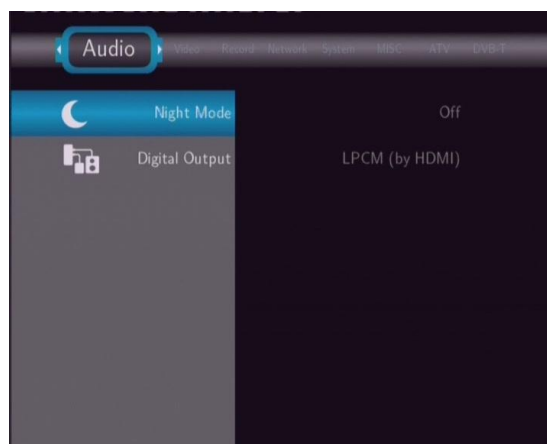 



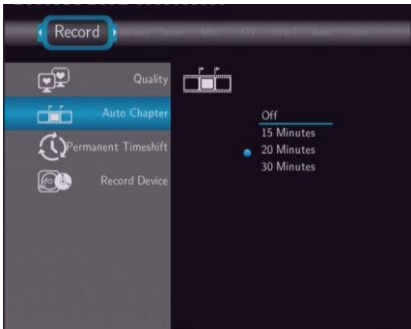 

Night Mode	Select to set night mode.
-------------------	---------------------------

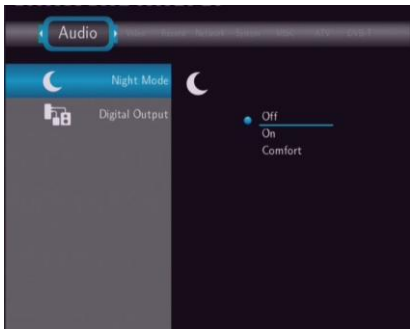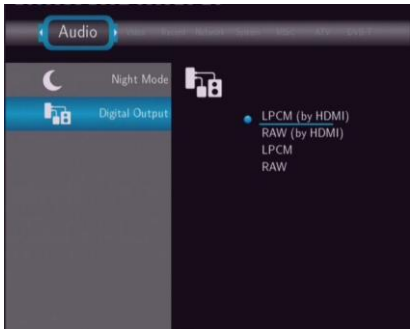
	 <p>Press the up / down button to select from Off, On, and Comfort. Press the enter button to confirm.</p>
Digital Output	<p>Select to set Digital Output (S/PDIF) mode.</p>  <p>Press the up / down button to select from RAW, and LPCM. Press the enter button to confirm.</p>

7.5 Changing Record Settings

Press the **left / right** button on the remote control to select the **Record** tab from the menu bar.

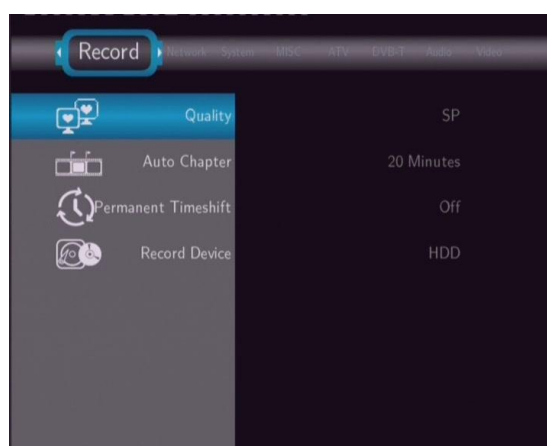



Quality	<p>Select to set the default recording quality setting.</p>  <p>Press the up / down button to select the quality setting you require. The highest quality setting is HQ which requires the most storage space. The other settings reduce recording quality sequentially but also require less storage space. Press the enter button to confirm.</p>
Auto Chapter	<p>Select to add chapter marks automatically at set intervals.</p>  <p>Press the up / down button to select the interval you require. An automatic chapter mark will be added at each interval, allowing you to browse titles easily after recording. Press the enter button to confirm.</p>
Permanent Timeshift	<p>Select to set Time Shift mode.</p>  <p>Press the up / down button to select from On and Off. Press the enter button to confirm. If On, the time shift will start automatically while in Video In mode.</p>
Record Device	<p>Select to set device to restore the recorded files.</p>



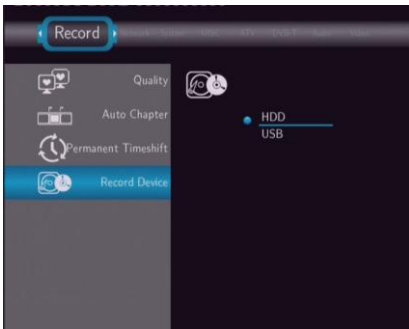 
	 <p>Press the up / down button to select from HDD and USB. Press the enter button to confirm.</p>
--	--

7.6 Changing Network Settings

  Press the **left** / **right** button on the remote control to select the **Network** tab from the menu bar.

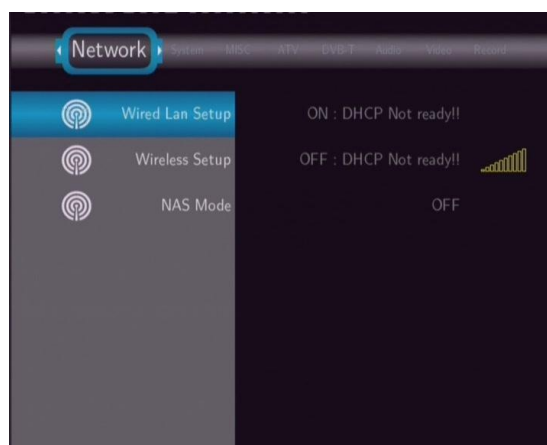



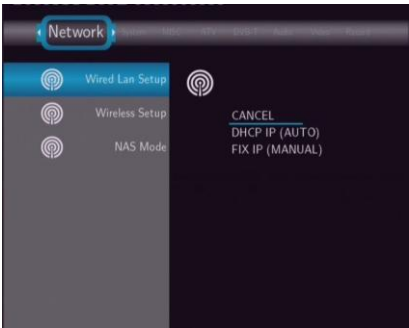
Wired LAN Setup	<p>Select to set the Ethernet settings.</p> <p>Before using the network functions, please check following items:</p> <ol style="list-style-type: none"> 1) Connect the player to network first; 2) Please enable NetBIOS of TCP/IP on computer; 3) Please turn off your PC's firewall; 4) Please enable your PC's 'Guest' account; 5) Please share the folders which you wish to browse on your PC, and make sure that 'Everyone' or 'Guest' has the right to access.  <p>Press the up / down button to select DHCP (AUTO) or FIXED IP (MANUAL). Press the enter button to confirm.</p>
------------------------	---

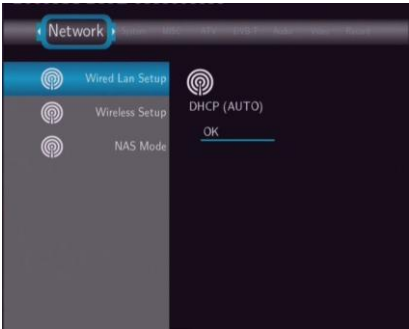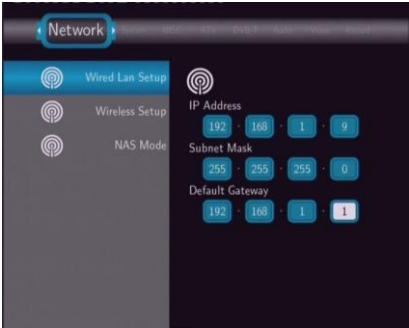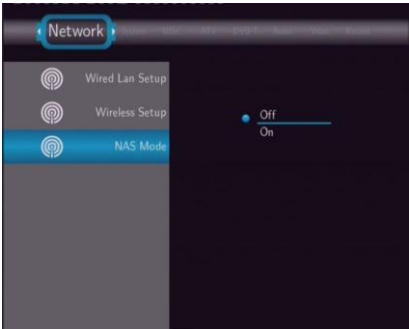   	<p>DHCP (AUTO)</p> <p>Set the IP address by auto.</p>  <p>Press the enter button to confirm.</p> <p>FIX IP (MANUAL)</p> <p>Using Fixed IP, it is required to enter the followings: IP Address, Subnet Mask, and Default Gateway. For further assistance to the above settings, please contact the network administrator.</p>  <p>Use navigational and numeric buttons to enter IP address. Press the enter button to confirm.</p>
<p>Wireless Setup</p>	<p>Please refer to the user's guide to wireless function in the package of EMTEC Wi200 USB adapter for more details about these settings.</p>
<p>NAS Mode</p>	<p>Select to turn the NAS mode on / off.</p>  <p>Press the up / down button to select from Off, and On. Press the enter button to confirm.</p>

7.7 Changing System Settings

   
Press the **left** / **right** button on the remote control to select the **System** tab from the menu.

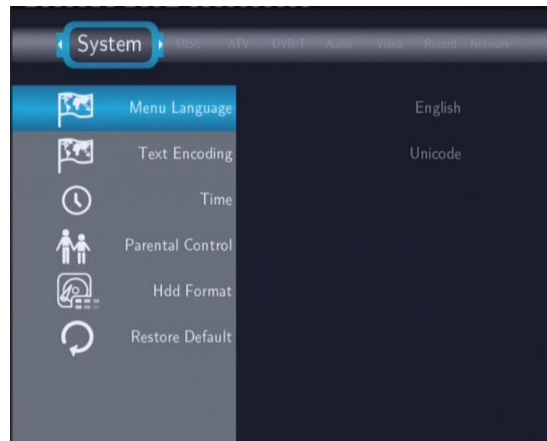

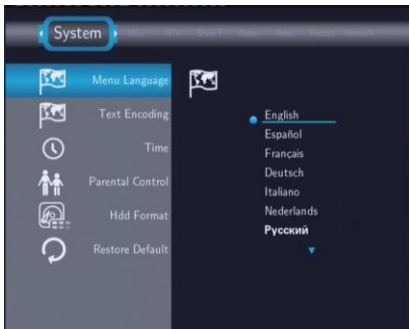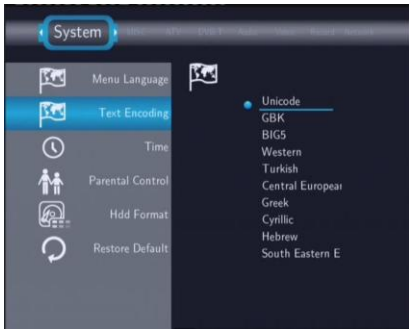Menu Language	<p>Select to choose the OSD (On Screen Display) language.</p>  <p>Press the up / down button to select the language. Press the enter button to confirm.</p>
Text Encoding	<p>Select to set text encoding.</p>  <p>Press the up / down button to select from Unicode, Chinese GBK, BIG5, and etc. Press the enter button to confirm.</p>
Time	<p>Select to set the system time.</p>


	<div data-bbox="742 197 1153 526" data-label="Image"> </div> <p>Press the up / down button to select from Manual and Auto (via TV). Press the enter button to confirm.</p>
<p>Parental Control</p>	<div data-bbox="742 622 1153 952" data-label="Image"> </div> <p>Press the left / right button to select each field and the up / down button to adjust each setting. Press the enter button to confirm.</p> <div data-bbox="742 1097 1153 1426" data-label="Image"> </div> <p>Select to set the TV parental control options.</p> <p>A password will be needed for the modification. The default one is '0000'. Press the numerical buttons to input, and the enter button to confirm.</p> <p>Lock System</p> <div data-bbox="742 1615 1153 1944" data-label="Image"> </div> <p>Press the up / down button to turn on or off the parental system. Press the enter button to confirm.</p>

 Region

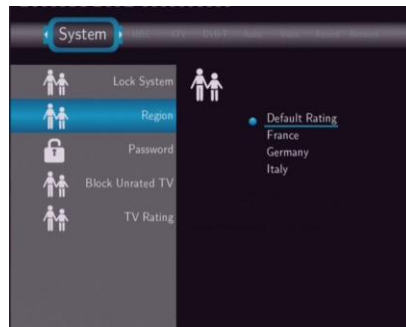


Press the **up** / **down** button to select the region. Press the **enter** button to confirm.

  Password

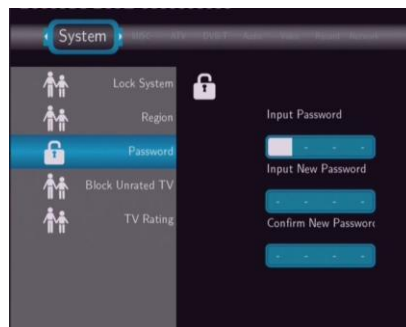

 

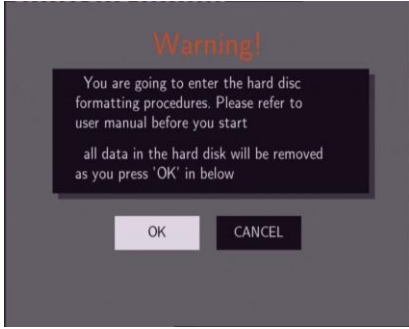 

Press the **numerical** buttons to input and change the password. Press the **enter** button to confirm.

 

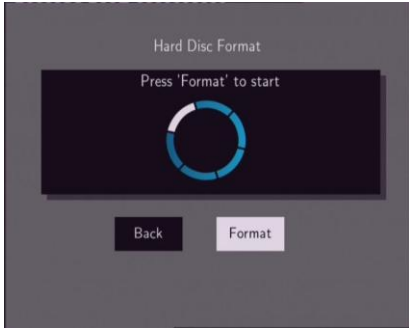 
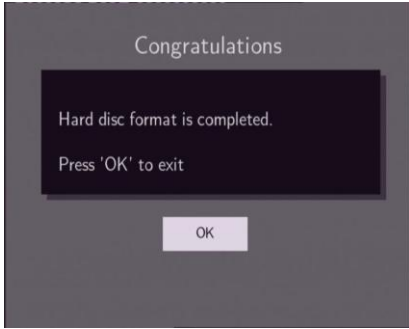 
Block Unrated TV

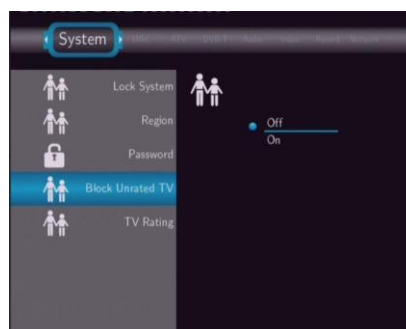


Press the **up** / **down** button to turn on or off. Press the **enter** button to confirm.

TV Rating

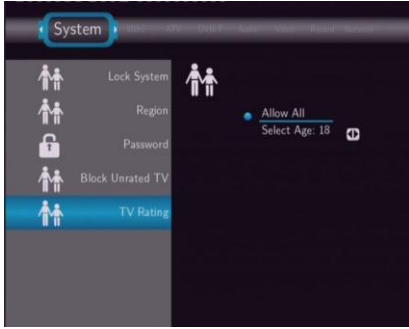
	 <p>Press the navigational buttons to select. Press the enter button to confirm, and the back button to exit.</p>
HDD Format	<p>Select to format the HDD.</p>  <p>Press the up / down button to select HDD Format. Press the enter button to confirm.</p>
	 <p>Press the left / right button to select OK. Press the enter button to confirm.</p>
	 <p>Press the up / down button to adjust the capacity of time shift buffer. Press the left / right button to select Next, and the enter button to confirm.</p>

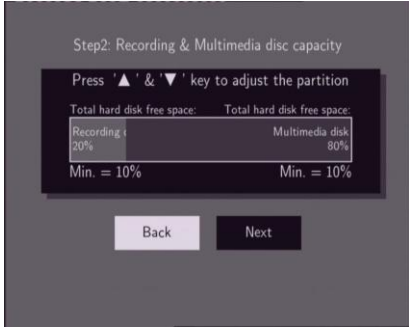
	 <p>Step2: Recording & Multimedia disc capacity</p> <p>Press '▲' & '▼' key to adjust the partition</p> <p>Total hard disk free space: Total hard disk free space:</p> <p>Recording: 20% Multimedia disk: 80%</p> <p>Min. = 10% Min. = 10%</p> <p>Back Next</p> <p>Press the up / down button to adjust the capacities of recording and multimedia partitions. Press the left / right button to select Next, and the enter button to confirm.</p>
	 <p>Press '▲' & '▼' key to adjust the partition</p> <p>Press '▲' & '▼' key to adjust the partition</p> <p>Total free space: 386G bytes</p> <p>FAT32 Partition: 50% NTFS Partition: 50%</p> <p>Min. = 10% Min. = 10%</p> <p>Back Next</p> <p>Press the up / down button to adjust the capacities of FAT32 and NTFS partitions. Press the left / right button to select Next, and the enter button to confirm.</p>
	 <p>Hard Disc Format</p> <p>Press 'Format' to start</p> <p>Back Format</p> <p>Press the left / right button to select Format. Press the enter button to confirm. And the formatting will start, which will take for several minute, please be patient to wait.</p>
	 <p>Congratulations</p> <p>Hard disc format is completed.</p> <p>Press 'OK' to exit</p> <p>OK</p> <p>When formatting is completed, press the enter button to reboot.</p>
Restore Default	Select to restore factory defaults.

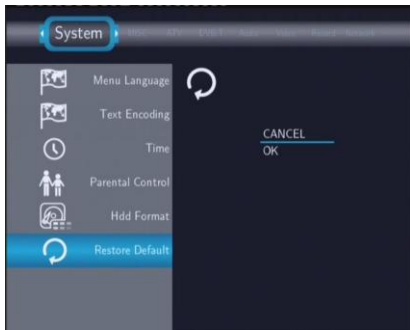 

  
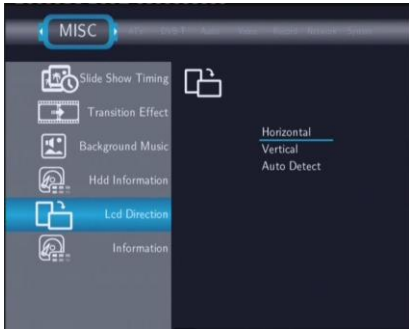 
	 <p>A confirmation message appears. Select OK and press the enter button to restore all settings to defaults.</p>
--	---

7.8 Miscellaneous

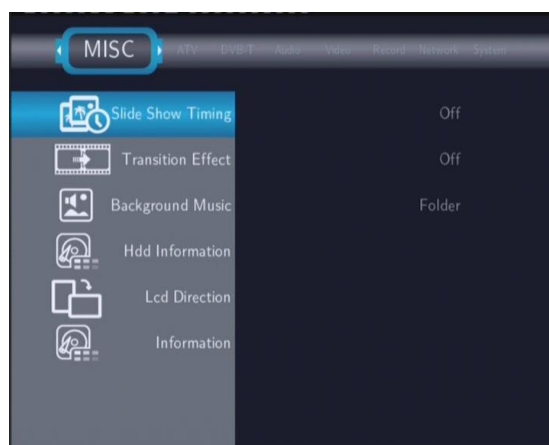Press the **left** / **right** button on the remote control to select the **MISC** tab from the menu.

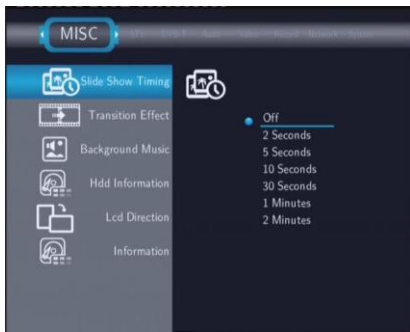


Slide Show Timing	<p>Select to set the interval time for photo slide show.</p>  <p>Press the up / down button to select. Press the enter button to confirm.</p>
Transition Effect	<p>Select to set the transition effect for photo slide show.</p>

	 <p>Press the up / down button to select. Press the enter button to confirm.</p>
Background Music	<p>Select to set the background music options while view pictures.</p>  <p>Press the up / down button to select from off, Folder, and All. Press the enter button to confirm.</p>
HDD Information	<p>Select to view the HDD capacities.</p>  <p>The capacities of the recording, time shift and multimedia partitions are listed here. Press the enter button to confirm.</p>
LCD Direction	<p>Select to set the direction of the LCD screen on the front panel.</p>  <p>Press the up / down button to select from Horizontal, Vertical, and Auto Detect. Press the enter button to confirm.</p>

Information

 
Select to view the system information.

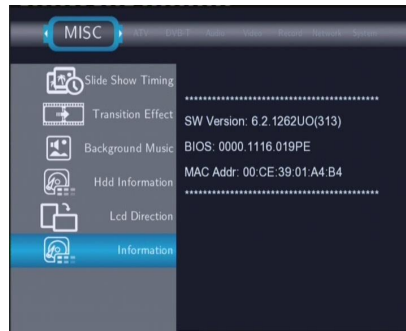

The version of the firmware, BIOS, and the MAC Address, etc. are listed here. Press the **enter** button to confirm.

8. Browser Menu

 The Browser menu allows you to browse and play music, photo and movie files stored on a HDD, an external USB device, and Network. To enter the menu, select the **Browser** icon from the main interface.

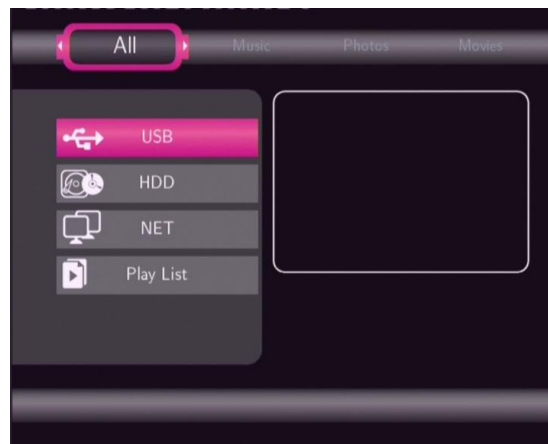

Press the **up** / **down** button to select the device on which the media is stored. Choose from HDD, USB, NET, and press the **enter** button.

When data on HDD, USB device is connected or connect the system to Network, you can also browse photos, listen to music, and watch movies.

8.1 Browsing All

Use the **left** / **right** button on the remote control to select the **All** tab.



All directories and supported contents will be displayed. Press the **up** / **down** button to select the directory or file you wish to browse, and press the **enter** button to confirm.

8.2 Browsing Music

Use the **left** / **right** button on the remote control to select the **Music** tab.



All directories and supported audio files in current directory will be displayed. Press the **up** / **down** button to select the file you want to play and press the **enter** button.

8.3 Browsing Photos

Use the **left** / **right** button on the remote control to select the **Photos** tab.



All directories and supported image files in current directory will be displayed. Press the **up** / **down** button to select the photo you want to view and press the **enter** button. The photo will be displayed full screen.

 
Note:

1. When the photo is displayed in full screen mode, the slide show starts automatically.
 2. While listening to music files, you can browse the photos at the same time.
-

While browsing a photo, you can press the **left** / **right** button to rotate a photo in any angle. Besides rotating a photo, you can press the **zoom** button to zoom in/out that photo. Three zoom levels are available.

8.4 Browsing Movies

Use the **left** / **right** button on the remote control to select the **Movies** tab.

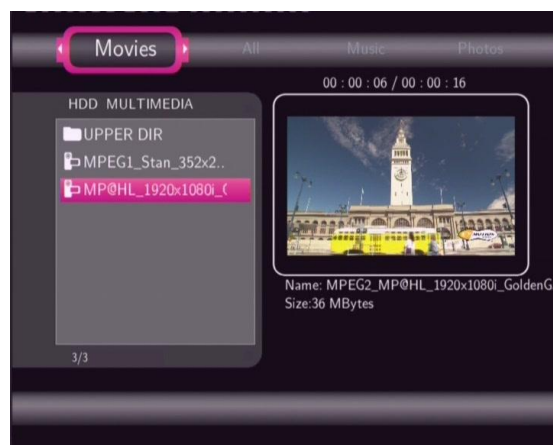

All directories and supported video files in current directory will be displayed. Press the **up** / **down** button to select the movie you want to view and press the **enter** button. The movie will be played in full screen mode.

This browsing movies function supports DAT, VOB, IFO, MPG, AVI, and TS file formats.

 
While browsing a movie in full screen mode, you can press the **zoom** button to zoom in/out the image. Four zoom levels are available.

8.5 Browsing via Network

You can streaming playback the multimedia files shared on the local area network (Ethernet or WLAN).

Before viewing the following, please make sure that you have read **7.6 Changing Network Settings** and made the right settings.

When selecting NET in the Browser menu, there are two ways to locate the multimedia files shared on your local network. One way is to browse through workgroup; the other way is to browse through 'My_Shortcuts'.

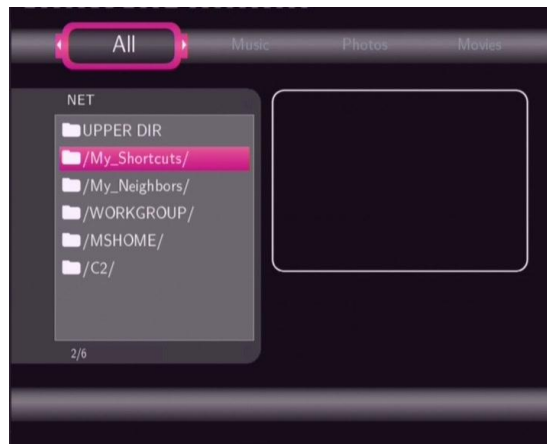

8.5.1 Browsing through Workgroup

You can choose the workgroup which your PC belongs to from the workgroup list, find your PC name, and press the **enter** button to confirm.



Then select the shared multimedia file that you want to browse.

 


Note:

1. While browsing high definition video files (resolution up to 720p / 1080i / 1080p) via Ethernet or WLAN, the video might be buffering. It is normal due to the limit of network speed or signal strength.
2. Due to different network conditions, sometimes the workgroup might not be accessed or shown in the list. And then you need to use 'My_Shortcuts' to browse shared files.

8.5.2 Browsing through 'My_Shortcuts'

You can also set 'Specific File Server IP' and access it from 'My_Shortcuts' in the menu. Press the **menu** button and a tools menu appears.

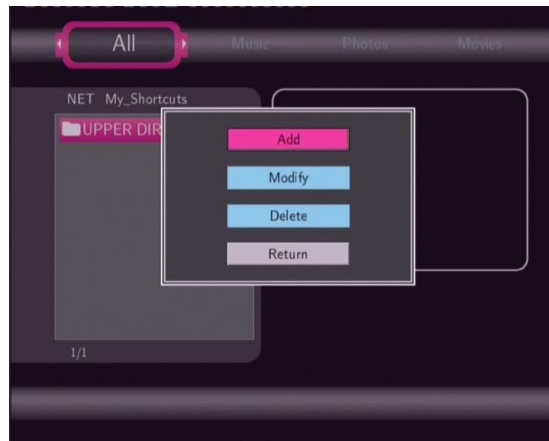

Network Browser

Select to set Net User ID, Net Password, and Specific File Server IP, which enables to browse files on NET through 'My_Shortcuts'.



Select Net User ID and the entry screen will appear.

Press the **navigation** buttons to select letters and numbers. Select **CAPS** to toggle between uppercase and lowercase letters. Press <- to delete a letter. Press -> to insert a space. Press the **enter** button to input each letter or number. Select **OK** and press the **enter** button to confirm all changes.



Select Net Password and the entry screen will appear. See above.



Select Specific File Server IP, and use **navigational** and **numeric** buttons to enter IP address.



You can also select Detail to set the Label, Domain, and Host Name of the shortcut. Then select OK and press the **enter** button to confirm.

Select the shortcut you added and press the **enter** button to confirm.



Then select the shared multimedia file that you want to browse.

8.6 Renaming / Deleting Files

When navigating in the browser menu, you can press the **menu** button to activate a popup menu where you can rename and delete files or folders.



 
Press the **up** / **down** button to select from Return, Rename, and Delete. And press the **enter** button to confirm.

8.6.1 Renaming Files



Press the **navigation** buttons to select letters and numbers. Select **CAPS** to toggle between uppercase and lowercase letters. Press <- to delete a letter. Press -> to insert a space. Press the **enter** button to input each letter or number. Select **OK** and press the **enter** button to confirm all changes.

8.6.2 Deleting Files

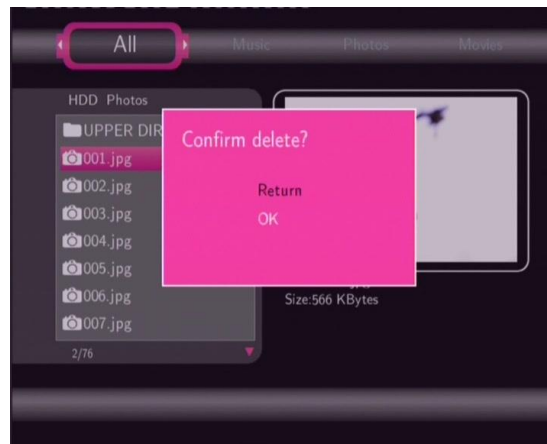

Press the **up** / **down** button to select OK. And press the **enter** button to confirm the deleting operation. Or select Return to cancel.

Note: Partitions of NTFS file system format on the hard disc drive might be read-only.

8.7 Managing the Playlist

This player supports the playlist function, which allows you to add your favorite content to the playlist, and enjoy them at any time.

8.7.1 Adding files to the playlist

Select the favorite file you wish to add, press the **red** button on the bottom of the remote control, and the file will be ticked. Press the **green** button on the bottom of the remote control to confirm, and then an on-screen message 'Add selects to list' will be shown. Multiple selections are allowed. See photo below.



8.7.2 Browsing the playlist

Press the **up** / **down** button to select **Play List** in the browser menu. And press the **enter** button to confirm. Then you will enter the playlist.



If you wish to delete a file from the playlist, press the **red** button to select, and then press the **green** button to confirm.

 


9. Media Library



Owing to a powerful search engine, the library menu allows you to search and browse multimedia files stored on the internal HDD in most easy ways. To enter this menu, select the **Library** icon on the main interface.





9.1 Music Library


Use the **left** / **right** button on the remote control to select the **Music** tab.

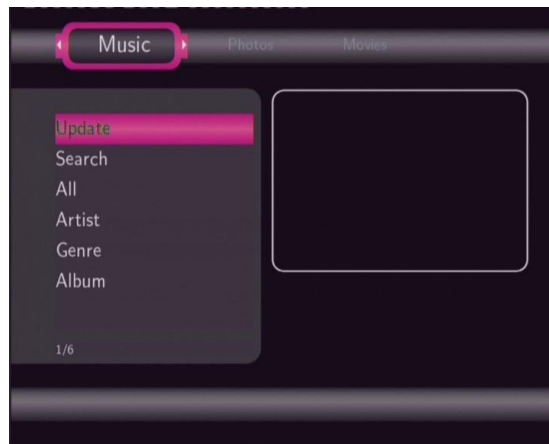

 Press the **up** / **down** button to select from Update, Search, All, Artist, Genre, and Album. And press the **enter** button to confirm.

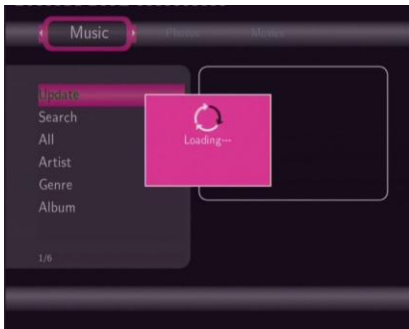
Update	<p>Select to update and synchronize all the music stored on the internal HDD to the library.</p> 
Search	<p>Select to search for music files by their names.</p>  <p>Use the navigational buttons to select, and press the enter button to confirm. Select OK and press the enter button, and then the files you desired will be displayed on the screen.</p>
All	<p>Select to list all the music files in the library.</p>

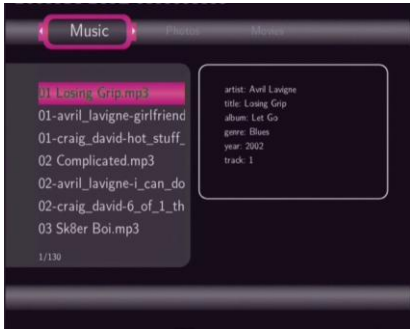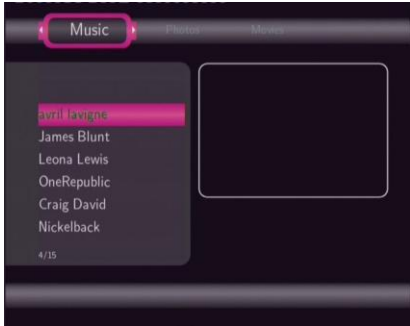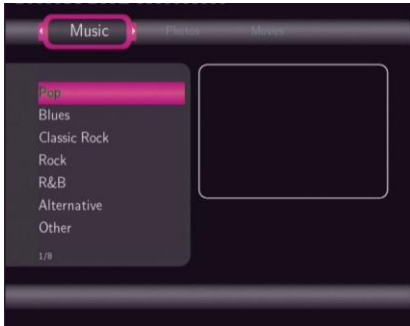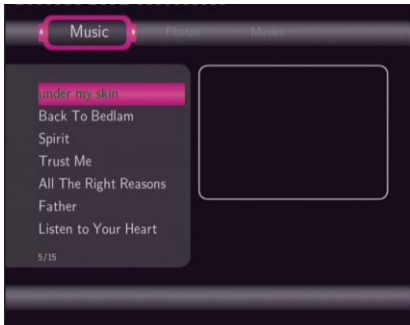    	
Artist	<p>Select to search for music files by artist.</p>  <p>Press the up / down button to select the artist, and press the enter button to confirm.</p>
Genre	<p>Select to search for music files by genre.</p>  <p>Press the up / down button to select the genre, and press the enter button to confirm.</p>
Album	<p>Select to search for music files by album.</p>  <p>Press the up / down button to select the album, and press the enter button to confirm.</p>
Quick-Search	<p>You can also press the right button to turn on a Quick-Search bar while browsing music files in the library.</p>

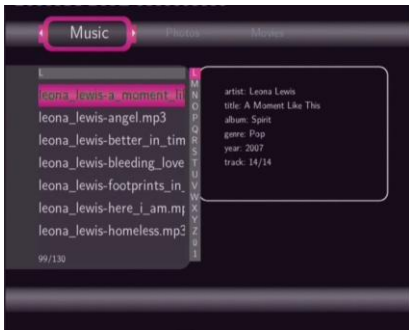 
	 <p>Press the up / down button to select characters on the Quick-Search bar, and press the enter button to confirm. And then music files with name starting with the specific characters will be displayed onto the top. Press the left button to delete characters, and press the back button to close the Quick-Search bar.</p>
--	--




 
9.2 Photo Library

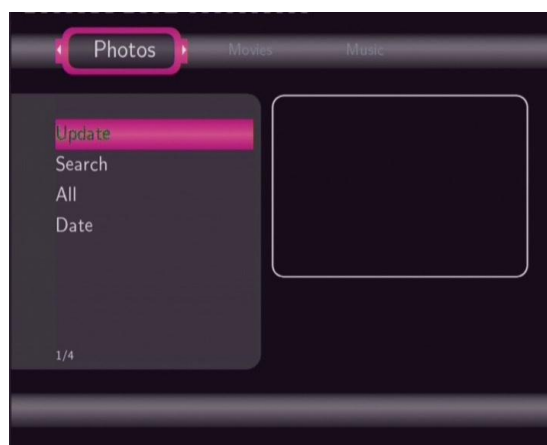 Use the **left** / **right** button on the remote control to select the **Photos** tab.

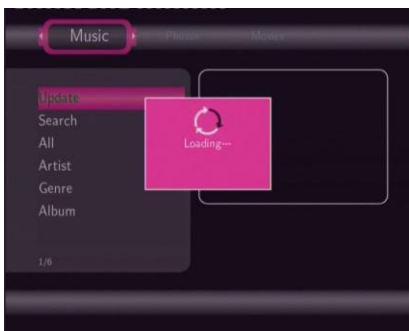

Press the **up** / **down** button to select from Update, Search, All, and Date. And press the **enter** button to confirm.


Update	<p>Select to update and synchronize all the photos stored on the internal HDD to the library.</p> 
Search	<p>Select to search for photos by their names.</p>

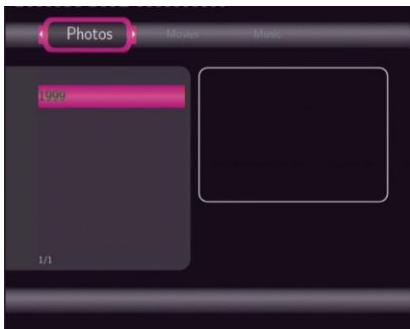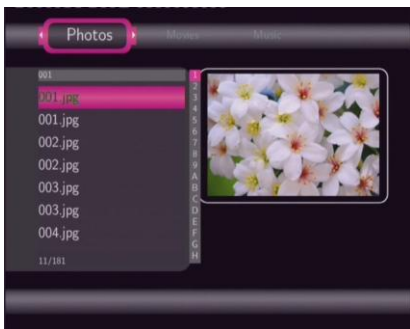  	 <p>Use the navigational buttons to select, and press the enter button to confirm. Select OK and press the enter button, and then the files you desired will be displayed on the screen.</p>
All	<p>Select to list all the photos in the library.</p> 
Date	<p>Select to search for photos by date.</p>  <p>Press the up / down button to select the date, and press the enter button to confirm.</p>
Quick-Search	<p>You can also press the right button to turn on a Quick-Search bar while previewing photos in the library.</p>  <p>Press the up / down button to select characters on the Quick-Search bar, and press the enter button to confirm. And then photos with name</p>



	starting with the specific characters will be displayed onto the top. Press the left button to delete characters, and press the back button to close the Quick-Search bar.
--	--

  

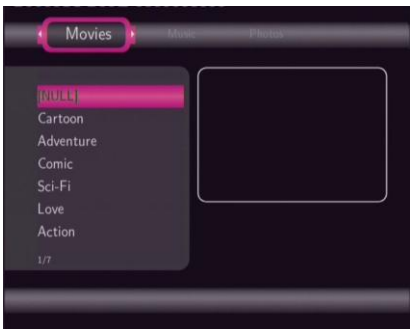 

9.3 Movie Library

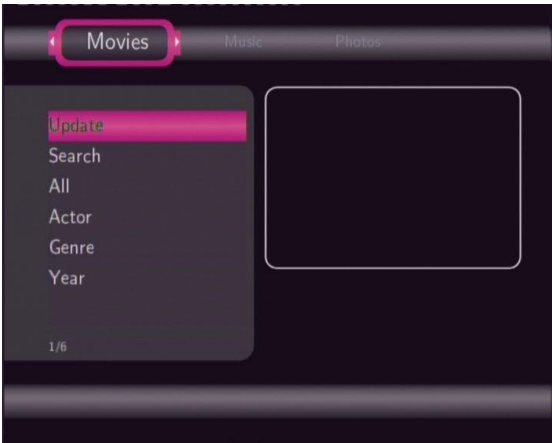
Use the **left** / **right** button on the remote control to select the **Movies** tab.



Press the **up** / **down** button to select from Update, Search, All, Actor, Genre, and Year. And press the **enter** button to confirm.

Update	<p>Select to update and synchronize all the movies stored on the internal HDD to the library.</p> 
Search	<p>Select to search for movies by their names.</p>  <p>Use the navigational buttons to select, and press the enter button to confirm. Select OK and press the enter button, and then the files you desired will be displayed on the screen.</p>

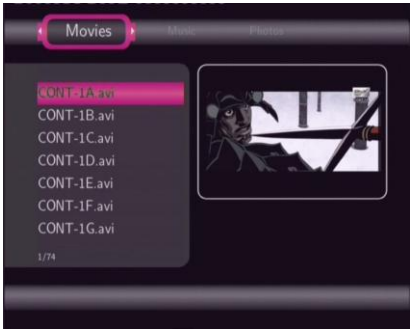All	<p>Select to list all the movies in the library.</p> 
Actor	<p>Select to search for movies by actor.</p>  <p>Press the up / down button to select the actor, and press the enter button to confirm.</p>
Genre	<p>Select to search for movies by genre.</p>  <p>Press the up / down button to select the genre, and press the enter button to confirm.</p>
Year	<p>Select to search for movies by year.</p>  <p>Press the up / down button to select the year, and press the enter button to confirm.</p>
Quick-Search	<p>You can also press the right button to turn on a Quick-Search bar while</p>

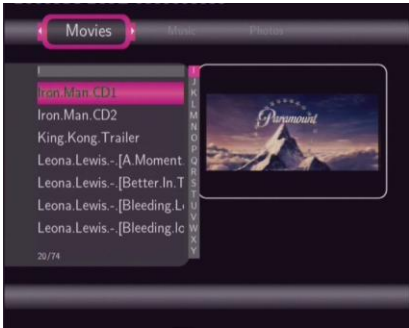 	<p>previewing movies in the library.</p>  <p>Press the up / down button to select characters on the Quick-Search bar, and press the enter button to confirm. And then movies with name starting with the specific characters will be displayed onto the top. Press the left button to delete characters, and press the back button to close the Quick-Search bar.</p>
--	--

Note:

 
In order to use the search function more efficiently, you are encouraged to use the following rules to name the movies stored on the internal HDD.

Syntax: [Name][Actor][Genre][Year].extension


Examples: [Enchanted.CD1][Amy Adams][Love][2007].avi, [The.Dark.Knight.CD1][Christian Bale][Action][2008].avi, etc.

10. File Copy Menu

Press the **copy** button on the remote control to enter the **File Copy** menu, which allows you to copy files between HDD, USB devices and Network.

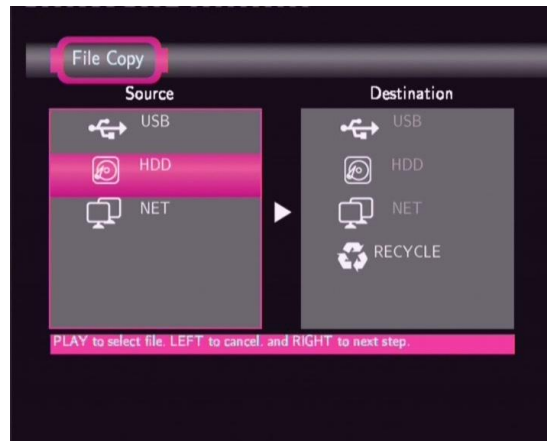


 Step 1: Select the source device and destination device.

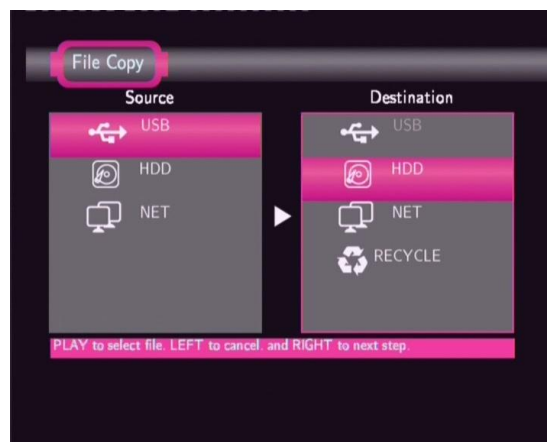


Press the **up** / **down** button to select device. Press the **left** button to cancel, and the **right** button for next step.

 Step 2: Select the source files you want to copy.

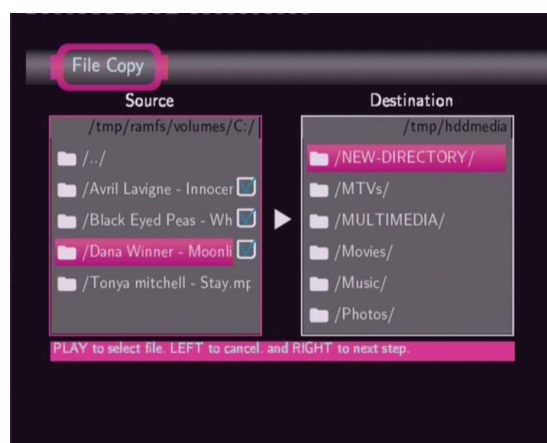


Press the **play** button to select files, the **left** button to cancel, and the **right** button to next step.

 Step 3: Select the destination folder to store the above files.

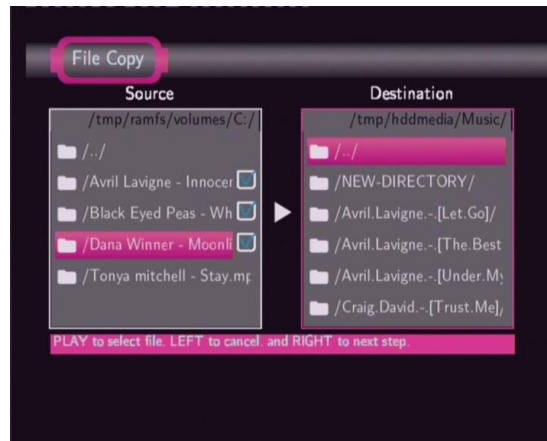


Press the **up** / **down** button to select folder. Press the **left** button to cancel, and the **right** button for next step.

 Step 4: Proceed to copy selected files.

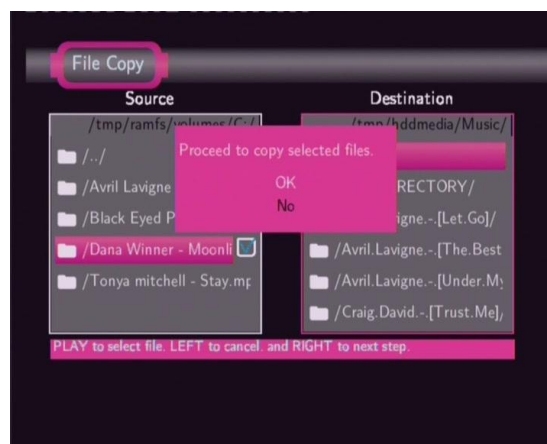

 
Press the **up** / **down** button to select **OK**, press the **enter** button to confirm. And the copy will start.

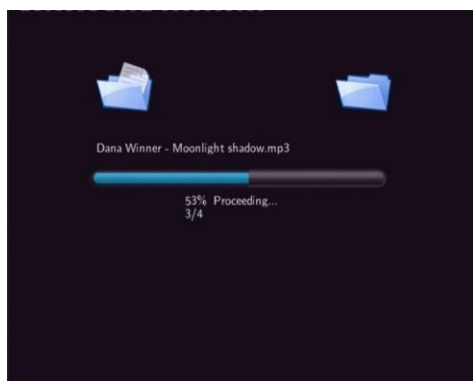

11. NAS Function

This player can be used as a NAS (Network-Attached Storage) device. It can be attached to the home network via either Ethernet or WLAN. This feature allows homes to store and retrieve large amounts of data more affordable than ever before.

 When the network connection is done correctly and ready for use, please activate the NAS mode in the setup menu in advance (refer to **7.6 Changing Network Settings** for more details), and then type: \\NAS or \\IP Address in the Run window (click Run in the start menu) or the address bar of Internet Explorer on your PC (For example, if the IP address of the player is 192.168.0.9, please type: \\192.168.0.9 or \\NAS), and click OK or press the Enter button on the keyboard.

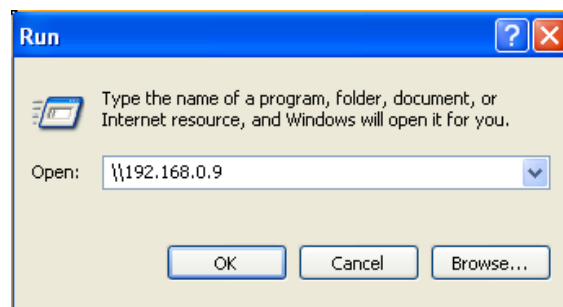


Then you can view, and edit the files stored on the hard disk installed on the player. In this way, you can also playback and copy files via network between your PC and the player.

Note:

1. Partitions of NTFS file system format on the hard disc drive might be read-only;
2. Please turn on the NAS mode in the setup menu before using this function

12. Listening to Internet Radio

 This player integrates the SHOUTcast free Internet radio function. Select the **Internet Radio** icon on the main interface to enter this menu.

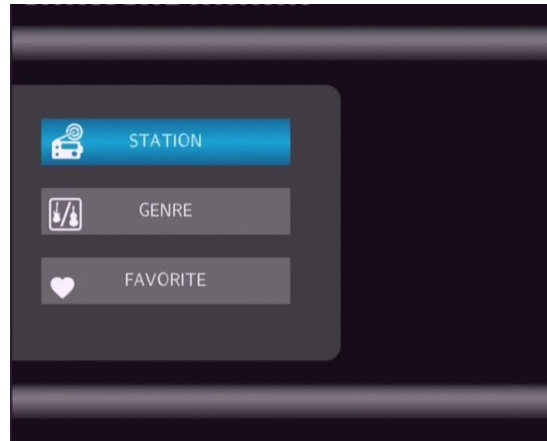


Note:

1. Make sure the player is connected properly to a LAN or WLAN with Internet access, please refer to '**7.6 Changing Network Settings**' for more details;
2. When you enter the Internet Radio menu at the first time, it will take several seconds to download data from the Internet, please be patient to wait;
3. For more about SHOUTcast, please refer to the website: www.shoutcast.com


12.1 Station List Menu

 Press the **up** / **down** button to select STATION, and press the **enter** button to confirm.

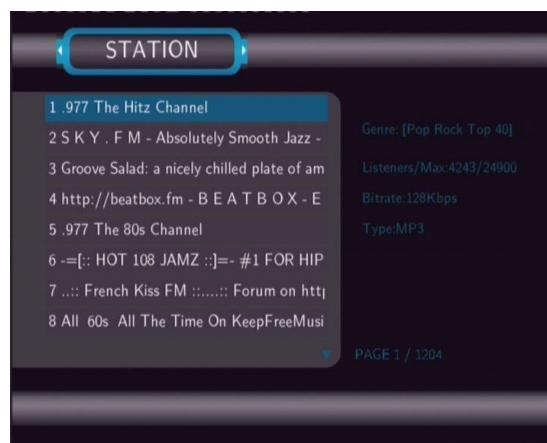


Press the **up** / **down** button to select the station you wish to visit from the list. Press the **enter** button to confirm. You can also press the **prev** / **next** button to page up and down.

 When a station is selected, then you will enter the CHANNEL List menu. Press the **up** / **down** button to select the channel you wish to listen to.

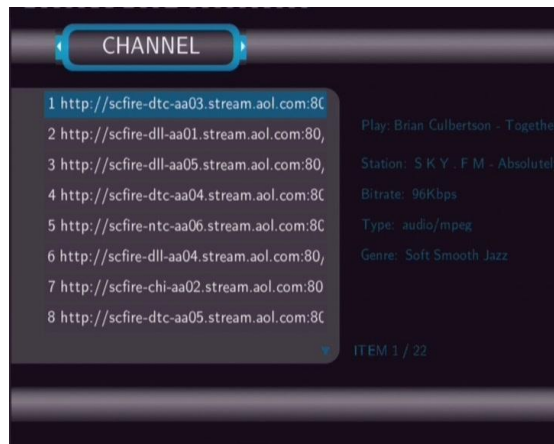

Press the **enter** button or the **play** button to start listening to the channel. And press the **stop** button or the **back** button to stop.

 When a station is highlighted, you can press the **menu** button to add it to the favorite.

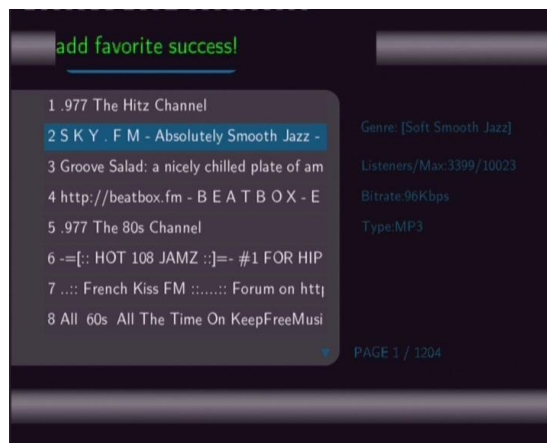

12.2 Genre List Menu

 
Press the **up** / **down** button to select GENRE, and press the **enter** button to confirm.



Press the **up** / **down** button to select the genre you wish to visit from the list. Press the **enter** button to confirm. You can also press the **prev** / **next** button to page up and down. In this way, you can search your favorite stations via genre.


12.3 My Favorite Station

Press the **up** / **down** button to select FAVORITE, and press the **enter** button to confirm.

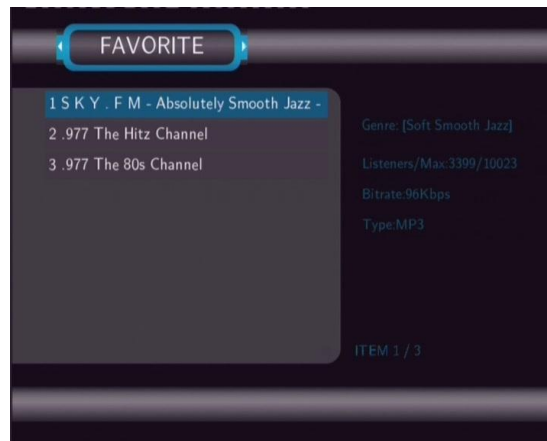

All the favorite stations you added from the station list menu can be found and managed here.

 When a station is highlighted, you can press the **menu** button to delete it from the favorite.

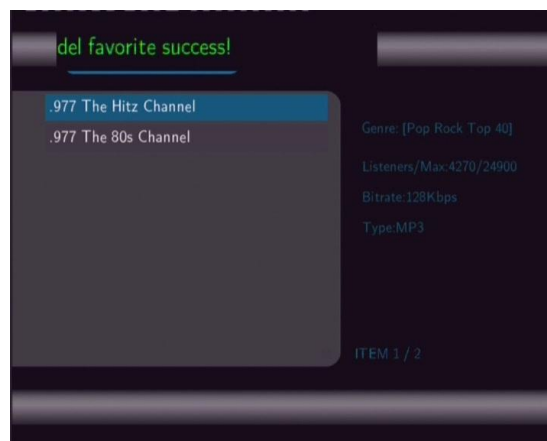


Note: You can have a maximum of 20 favorite stations in the list.

13. Upgrading the Firmware

The firmware is the operating system (OS) installed on the device. Firmware upgrades can bring new features, improvements and bug fixes.

To check whether you have the latest version of firmware:

 1. Select MISC in the Setup menu;
2. The firmware version number is displayed behind SW Version;
3. Compare it with the latest firmware released.

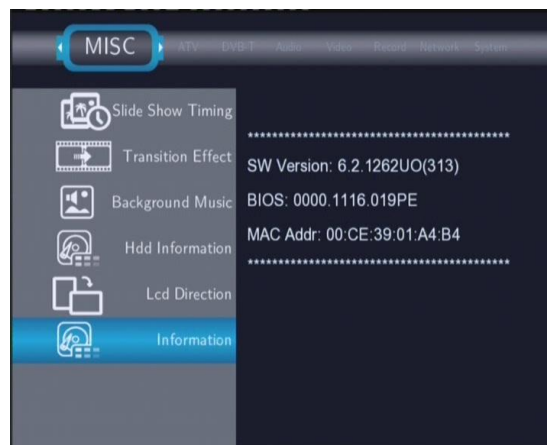

Download the latest firmware from our official website.

Step 1: Prepare the USB Pen Drive

You will need a USB Pen Drive for firmware upgrade. Copy the files for upgrade to the root directory of your USB Pen Drive.



Step 2: Connect the USB Pen Drive

Plug the USB Pen Drive into one of the USB HOST ports of the player.

Step 3: Hold the power / standby button

 
Press and hold the **power / standby** button on the front panel, and do not loosen.

Step 4: Connect the power cable

Plug the power cable into the DC IN jack, wait for about 3 seconds or more, and then loosen your finger on the **power / standby** button;

Firmware installation will start in about 30 seconds. The LED indicators on the front panel will be enlightened and flashing during installation. If it is connected to a TV set, a blue install page

will appear on the TV screen.

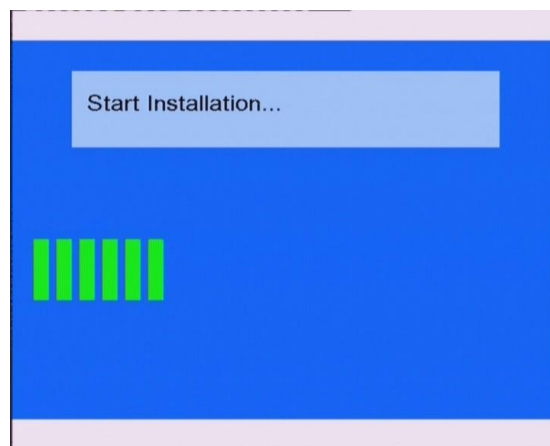

Please wait for several minutes, the installation will be completed, the LED indicators will go off, and the player will be powered off automatically. Then you can press the **power / standby** button to turn on the player and enjoy.

Note:

Do not turn off the power during installation;

The USB Pen Drive is not allowed to be unplugged during installation.

14. Appendixes

14.1 Specifications

USB SUPPORTED:

- USB HDD
 - Other USB Mass Storage Devices
 - USB 2.0 Interface
-

CONTENT FORMATS SUPPORTED:

- DAT/VOB/IFO/MPG/AVI/MPEG-2 TS
 - MP3/OGG/WMA
 - Compression rate: between 32 kbps and 320 kbps
 - JPEG/BMP
-

VIDEO CODECS SUPPORTED:

- MPEG-1/MPEG-2
 - MPEG-4 ASP: XviD
-

AUDIO CODECS SUPPORTED:

- MP2/MP3 /OGG Vorbis/WMA Standard (DRM, Pro & Advanced Profile not supported)/PCM
-

SUBTITLE FORMATS SUPPORTED:

- SRT, SMI, SSA, IDX/SUB, SUB
-

RECORDABLE DEVICES SUPPORTED:

- Built in HDD
 - USB HDD
-

VIDEO RECORDING MODE

Mode	80 GB HDD	120 GB HDD	160 GB HDD
HQ	16hrs	24hrs	33hrs
SP	32hrs	48hrs	66hrs
LP	48hrs	72hrs	99hrs
EP	64hrs	96hrs	132hrs
SLP	96hrs	144hrs	198hrs

VIDEO RECORDING FORMAT

- HQ/SP/LP/EP/SLP mode: MPEG-2 MP@ML
-

AUDIO RECORDING FORMAT

- HQ/SP/LP/EP/SLP mode: MP2 2-chanel
-

VIDEO OUTPUT SPECIFICATION

Composite Output	1 Vpp 75 Ohm
Components Output	Y:1 Vpp 75 Ohm
	Cb:0.7 Vpp 75 Ohm
	Cr:0.7 Vpp 75 Ohm

SCART Output	21-pin Euro SCART
HDMI Output	HDMI (Version 1.1)

AUDIO PERFORMANCE

DA Converter	24-bit/192kHz
AD Converter	24-bit/96kHz
Signal-Noise (1kHz)	≥ 95dB
Dynamic Range (1kHz)	≥90dB
Channel Separation	≥95dB
Total Harmonic Distortion (1kHz)	≤-85dB

NETWORK FEATURE

Ethernet	10/100Mbps Auto-Negotiation
WLAN	IEEE 802.11b/g, up to 54Mbps (supported by the optional WLAN USB Adapter)

ANALOG TV SYSTEM (only for S800)

Frequency Range	44.25MHz~863.25MHz (VHF I/III / UHF)
Video	PAL B/G, D/K, I, SECAM L and L'
Audio	Stereo, Mono
Analog TV Tuner	75 Ohm (VHF / UHF) TV Analog Antenna or cable

DIGITAL TERRESTRIAL TV SYSTEM (only for S800)

Frequency Range	44.25MHz~863.25MHz (VHF I/III / UHF)
COFDM	2K FFT or 8K FFT COFDM demodulator (Fully DVB-T compliant : ETS 300-744)
Code Rate	1/2, 2/3, 3/4, 5/6, and 7/8
Guard Interval	1/4, 1/8, 1/16, 1/32
Constellation QPSK	16QAM, 64 QAM
Bandwidth	6, 7 or 8MHz
Digital TV Tuner	75 Ohm (VHF / UHF) TV Digital Antenna

GENERAL

Power Supply	AC 100~240V	50~60Hz
Power	Approx. 35 W	
Consumption		
Operating Temperature	+5°C to +35°C (+36°F to +95°F)	
Operating Humidity	5% to 80% RH	

Hard Disk	3.5" SATA HDD
Dimensions (W/H/D)	211.5x57x152mm
Net Weight	Approx 1.2 kg

Note: The specifications and design of this product are subject to change without notice.

14.2 Frequently Asked Questions

Question 1. My computer does not recognize my player.

Answer:

- (1) Make sure the player is powered on. If it is off, the computer will not be able to find the player;
- (2) Make sure the player is connected to computer. (Refer to 1.4.1 for connecting player to computer);
- (3) When using Windows 98SE, install the USB driver first. After installation, restart the computer. Then reconnect the player to the computer. (Refer to 1.4.1 for connecting player to computer);
- (4) If you installed the Windows 98SE driver over your Windows® XP, 2000, or ME edition, problems might occur;
- (5) It is not recommend using the USB ports in the front of your computer, try to use the USB ports in the rear, because the USB ports in the front are often from non-powered hubs.

Question 2. When I try to disconnect the USB device, I keep on getting "The device 'Generic volume' cannot be stopped right now. Try stopping the device again later." message, what should I do?

Answer:

Close any program that might be accessing data on the player, including Windows® Explorer. If it does not work, close all programs and wait for another 20 seconds, then try the green arrow icon again. If it still does not work, you should shut down the player and disconnect the USB cable.

Question 3. I find new file names and folder names that I never created before or they have strange gibberish names.

Answer:

Most likely, the player's file allocation table (FAT) has been corrupted. This might be due to the player shutting down (due to low battery power) while reading or writing to your computer by the USB connection. Windows and Macintosh often write extra files to the hard disk such as finder.def or System volume info. These are normal and will not do any harm to the player.

Question 4. I used my player to transfer files back and forth between different computers. Will defragmenting the player hard disk do any harm to it?

Answer:

Defragmenting the player hard disk may be useful after having transferred many files to and

from the player. It is never harmful to use the defragment on the player. Make sure no other programs are running while using the Windows® defragment utility. Make sure you have connected the player with the external power adapter during this procedure.

Question 5. My files have disappeared from the player.

Answer:


Make sure that you browse your files via the correct Browser mode which means correct filtered views such as Photos, Music, or Movies.

Question 6. Why do some supported photo formats, cannot be shown in the photo function?

Answer:

In the JPEG format there are different modes. The player doesn't support all the modes. So you have to change your photo format first as follow:

 - (1) Use Photoshop to open the photo;
- (2) Choose "File" then "save as" from the menu, as the picture on the left hand side shows, select the picture format as JPEG, input the file name and click the "save" icon;
- (3) After click on the "save" icon, a new window will appear as the picture on the right hand side shows, select "Baseline (standard)" or "Baseline optimized";

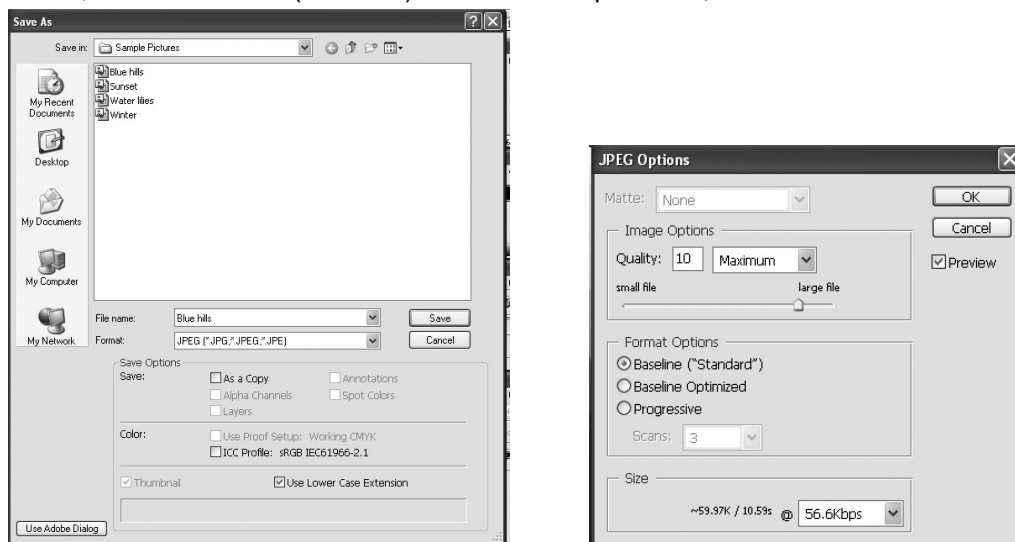

- (4) Click the "OK" icon.

Question 7. During power on, why does the TV will have a short flashing, blue screen or screensaver?

Answer:

This is normal, when the system initializes, it will setup the corresponding parameters so it can output the correct video signal to the TV, during the initializing time, the TV will receive incorrect signals or the signals will not be stable and will cause the TV screen to flash, some TV's will treat this as no signal, and will display a blue screen or screensaver.

Question 8. Why when I switch to Y/Pb/Pr 480P, 576P, 720P, 1080I, does the TV screen display an unwatchable picture?

Answer:

Please check if your TV supports Y/Pb/Pr 480P, 576P, 720P, 1080I output, if your TV does not support, please use the A/V signal display instead, press the TV SYSYEM button on the remote control, then switch the TV's video input to NTSC or PAL.

Question 9. Why is there no sound on movie or music playback when using Y/Pb/Pr component output?**Answer:**

Y/Pb/Pr output is a video output only, and does not include sound signals, when using Y/Pb/Pr output, please plug the A/V OUT or the S/PDIF jack to output sound.

Question10. Why couldn't the player find the hard disc?**Answer:**

Make sure the firmware is installed correctly, and no system partitions on the HDD were deleted. If hard disc failure occurs, please backup your data and reinstall the firmware.

Question11. Some functions like recording, time shift etc. do not work. What should I do?**Answer:**

If you find some functions do not work properly on the player, please change system settings to the default (Refer to 6.6 for changing system settings).

Question12. While playing movies in the multimedia partition, buttons like PREV, NEXT, A-B, etc. sometimes could not be used.**Answer:**

The above functions are designed for recorded video titles and IFO (DVD) files only.

You can find forums on the Internet where users responding to most of your questions on all models of Movie Cube as www.mhdworld.com

14.3 Copyrights and Trademarks

Copyrights

All rights reserved. No part of this manual may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission from the copyright holder. According to copyright law, no recorded data may be used for purposes other than personal enjoyment without permission from the copyright holder.

Trademarks

Microsoft and Windows are registered trademarks of Microsoft Corporation.
All other trademarks are property of their respective holders.

14.4 Warranty

What your warranty *does not* cover:

- Acts of nature, such as fire, static discharge.
- Damage from unauthorized repair, alteration or accident.
- Damage from misuse or neglect.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- Loss of customer's software, firmware, information, or memory data.
- Improper handling or installation.

For complete information regarding EMTEC Movie Cube warranty and customer support please visit our website: www.emtec-international.com

14.5 License information

This product contains Free Software which is licensed under the GNU General Public License, Version 2 (GPL). You will find hereinafter a copy of the GPL license text.

We offer, valid for at least three years, to send to you the source code of the GPL-software. Please contact us at DEXXON Data Media GPL Source department at 00 33 1 41 32 21 21 or gplsource@dexxon.eu . You may also download the source code here <http://emcube.emtec.eu>

GNU GENERAL PUBLIC LICENSE TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program. You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.
2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
 - a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
 - b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
 - c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program. In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
 - a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

- 4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
- 5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
- 6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
- 7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by

court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice. This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free

software and of promoting the sharing and reuse of software generally. NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.